


# ASSEMBLY INSTRUCTIONS

## CD Storage Tower

### Easy Assembly Instructions

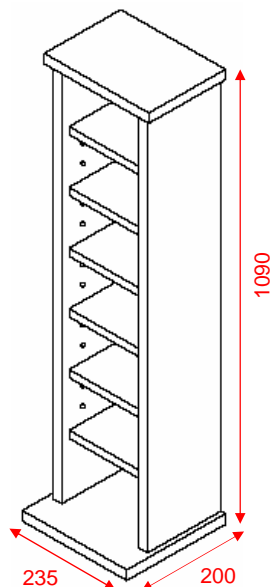


Help Line : 0870 600 89 90

#### Before you start, here is some helpful advice

1. We suggest that you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. This item should be attached to the wall with the enclosed strap for safety reasons before use. Due to the wide variety in types of walls, the necessary wall screw & rawl plug are not provided. Please read and follow the enclosed wall fixing guide carefully so that you can be sure you use the appropriate screw and rawl plug for your type of wall.
3. Do not discard any of the packaging until you have checked that you have all the components and fittings needed for assembly and in case the product is returned to the supplier for whatever reason.
4. Assemble the unit on a carpet, to avoid scratching the unit.
5. Keep all fittings and glue out of reach of children.
6. All you need to assemble the unit is an appropriate screwdriver.

## Components parts and fittings contained in the box

### Component Parts List

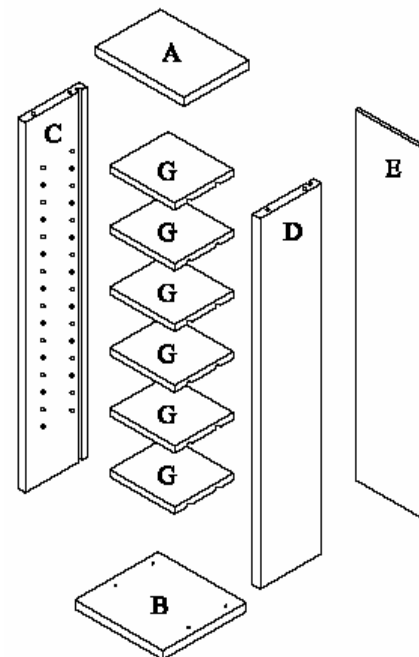

- A – Top x 1
- B – Base x 1
- C – Left Side x 1
- D – Right Side x 1
- E – Back Board x 1
- G – Adjustable Shelf x 6

### Fittings

- J** Dowel x 4



- K** Glue x 1




- L** Screw x 4



- M** Shelf Support Pin x 24



- N** Back Board Fixing x 4



- P** Screw x 4




- S** Wall Fixing Bag x 1




## ASSEMBLY INSTRUCTIONS

### CD Storage Tower




1. Place a small amount of Glue (part K) into the dowel holes and onto the joint's surfaces. Use long Dowel (part J) to fix the Top Panel (part A) onto the Right Side panel (part C) and the Left Side panel (part D).

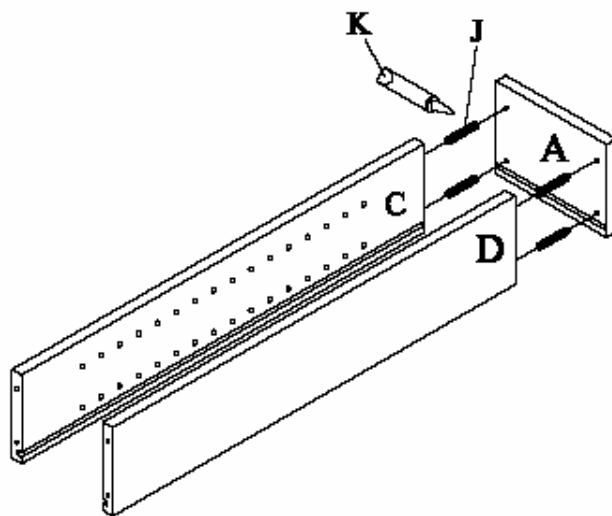


## ASSEMBLY INSTRUCTIONS

### CD Storage Tower




2. Place a small amount of Glue (part K) into the grooves. Carefully slide the Back Panel (part E) into the unit.

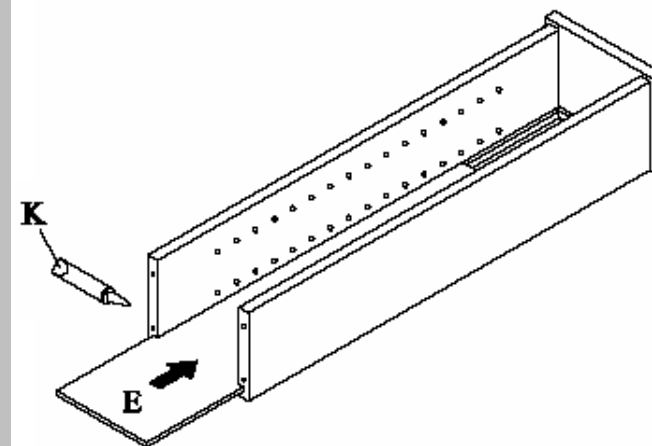


## ASSEMBLY INSTRUCTIONS

### CD Storage Tower




3. Place a small amount of Glue (part K) onto the joint's surfaces. Use Screw (part L) to fix the Bottom panel (part B) onto the unit.

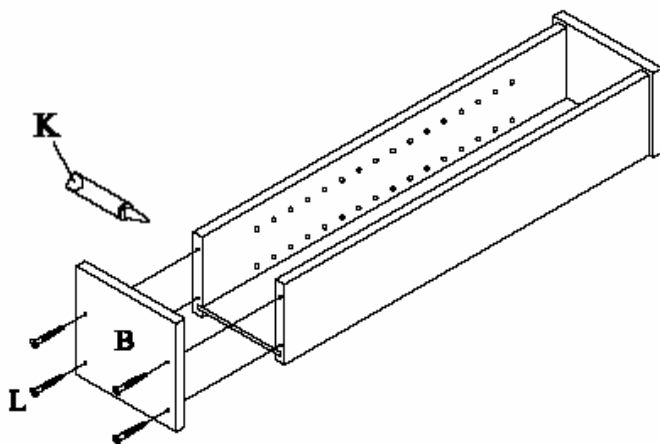

5 6

## ASSEMBLY INSTRUCTIONS


### CD Storage Tower



4. Insert the shelf supports (part M) into the unit. Ensure they are well fitted before inserting the Shelves.


Slide Shelves (part G) into the unit.

**NOTE:** Set the shelf supports to the desired height.

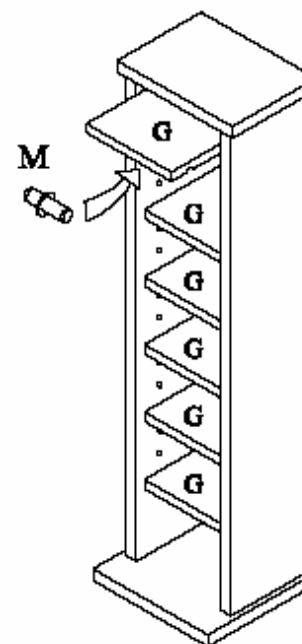


## ASSEMBLY INSTRUCTIONS

### CD Storage Tower




5. Attach the 4 back board fixings (part N) evenly around the unit (see the diagram for approximate positions) and secure in place with the 4 screws (part P) Do not overtighten.

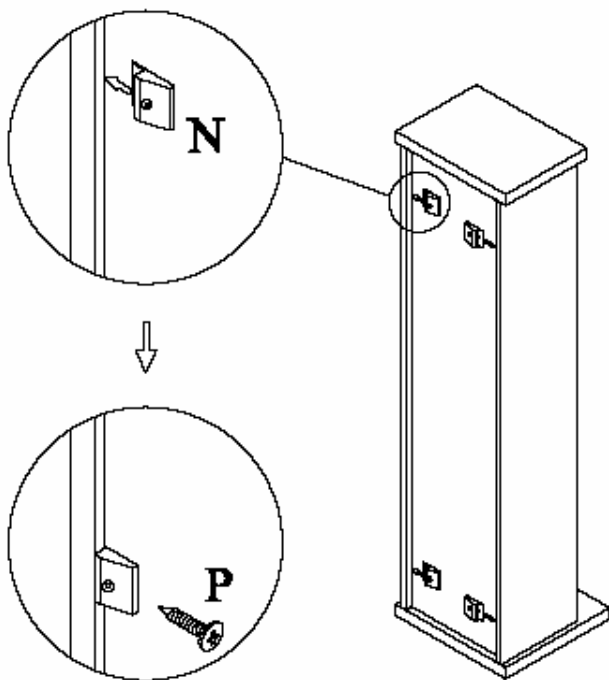


**BACK SIDE**

## ASSEMBLY INSTRUCTIONS

### CD Storage Tower




6. We strongly recommend that the unit is attached to the wall using the Fixing Pack (S) provided. Place the unit against the wall in its final desired location, note where the wall screw will need to be fixed into the wall. Attach the wall strap to the unit using the small screw as per the diagram. Using a suitable drill bit attach the strap to the wall using the screw and rawl plug provided (make sure the rawl plug supplied is suitable for the wall, if not please use a suitable rawl plug).

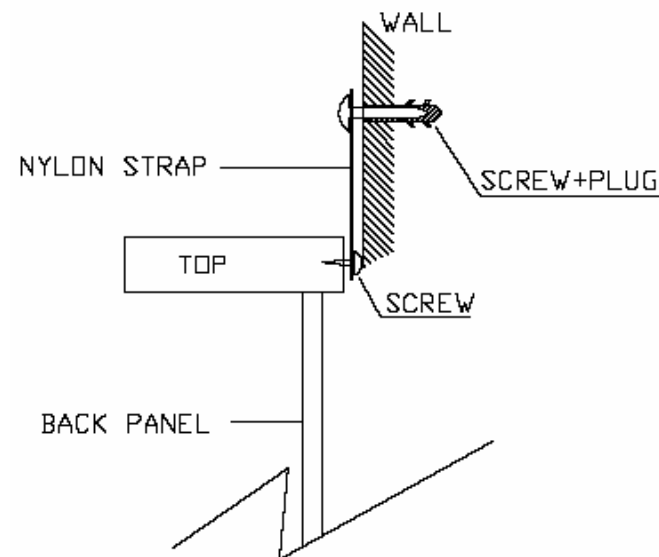


## A Guide to Wall Mounting & Fixings

### IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

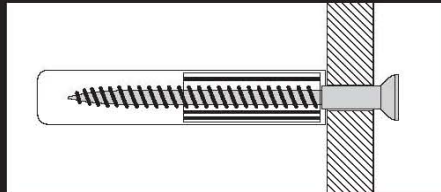


### HINTS:

- 1) General Rule  Always use a larger screw and wall plug if you are not sure.
- 2) Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
- 5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

### Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

#### No.1 "Standard" Wall Plug General Wall Materials

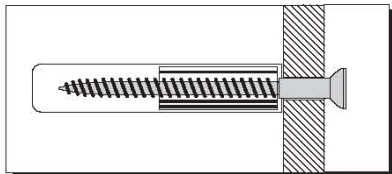

These come in various sizes and are made from plastic or sometimes wood fiber.


#### No.2 "General Purpose" Wall Plug Aerated / Breeze Block

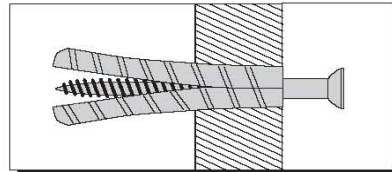

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, a General Purpose Plug can be used.


## A Guide to Wall Mounting & Fixings

#### No.3 "Shield Anchor" Wall Plug Heavy Loads

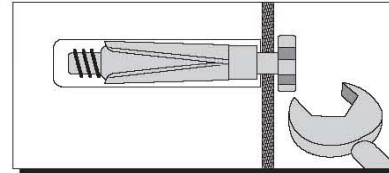


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

#### No.4 "Cavity Fixing" Wall Plug

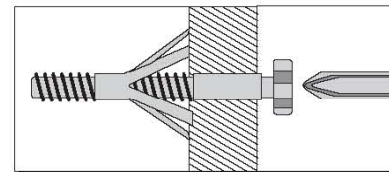


For use with plaster board partitions or hollow wooden doors.

#### No.5 "Cavity Fixing - Heavy Duty" Wall Plug

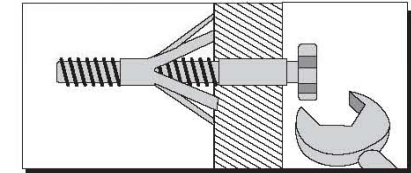

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

#### No.6 "Hammer Fixing" Wall Plug

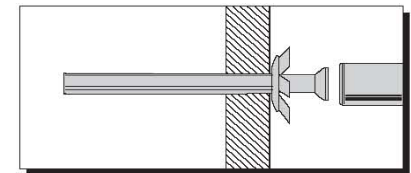

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

### CARE & MAINTENANCE

#### SAFETY

Always check the fitting and location to ensure your safety in and around the home.

#### FITTING

From time to time check the fitting to ensure the wall plugs or screws do not become loose.