

Venice - Tall Display


Assembly Instructions - Please keep for future reference

457/6918

379/4090

805/8607

HOME

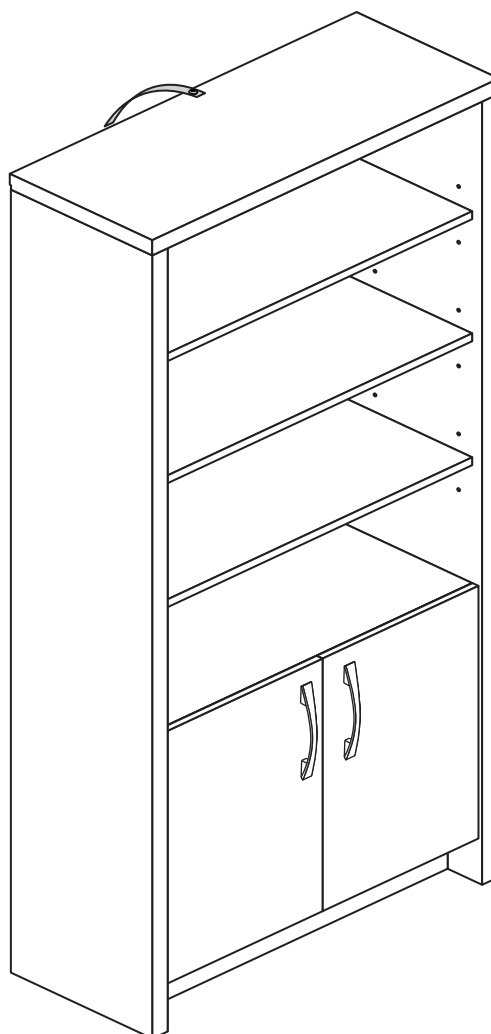

WARNING!

In order to prevent overturning, this product must be used with the wall attachment device provided

Dimensions

Width - 80cm

Depth - 33cm

Height - 183.5cm

More help is available throughout this booklet by scanning in the QR codes or typing in the links



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0330 016 1114

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 37kgs. Please lift with care.
- Assembly to be carried out by a competent adult only.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- During assembly children should be kept away from the product due to possible risk of injury.
- Installation shall only be carried out exactly according to the manufacturer's instructions - otherwise a safety risk can occur if incorrectly installed.

- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

- **WARNING:** To prevent possible overbalancing this unit **must be secured** to a wall using the overbalance protector kit supplied.
- Dispose of all packaging carefully and responsibly.
- Do not use this item if any components are missing or damaged.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Regularly check all fastenings to ensure that they are properly tightened.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

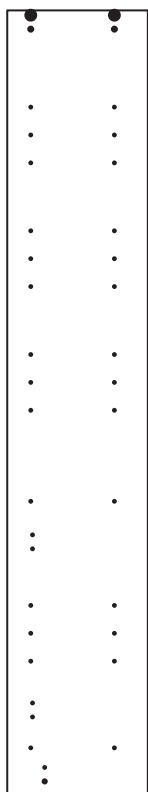

1 Left Side (*D1969A*)
(180 x 32.5cm)

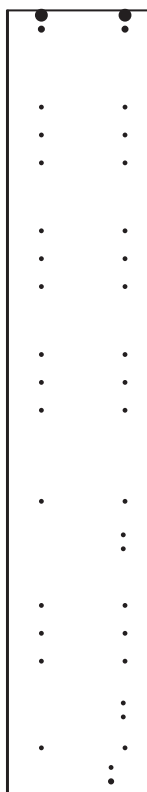

2 Right Side (*D1970A*)
(180 x 32.5cm)

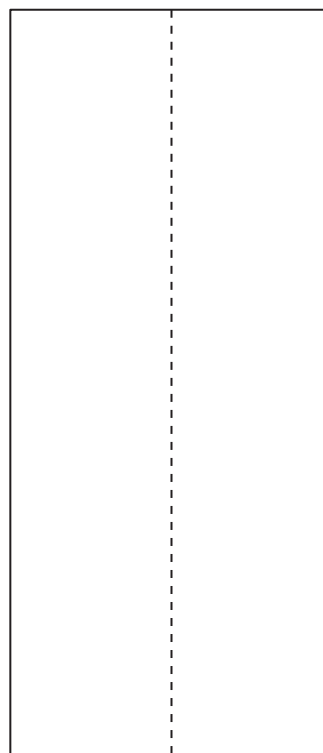

3 Back (*X747*)
(171.3 x 73.9cm)



4 Top (*D1972A*)
(79.6 x 32.7cm)




5 Horizontal (*D1971A*)
(72.2 x 29.9cm) x 2




6 Loose Shelf (*D1973A*)
(72.2 x 29.9cm) x 4



7 Plinth (*D1088A*)
(72.2 x 9.6cm)

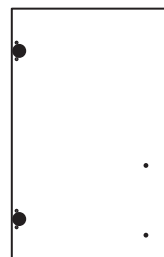

8 Left Hand Door (*D3082A*)
(58 x 35.8cm)

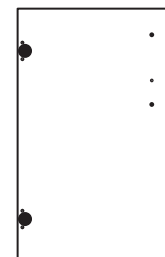


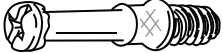

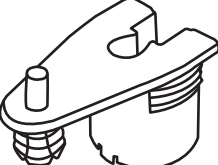










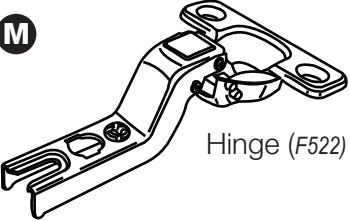
9 Right Hand Door (*DF-00010050*)
(58 x 35.8cm)



Components - Fittings

Please check you have all the fittings listed below

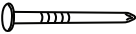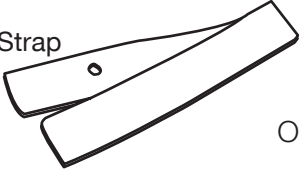Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
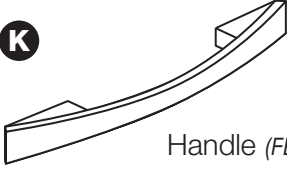
| | | |
|--|---|--|
| A  Wooden dowel (F22) x 2 | B  Large metal dowel (F901) x 10 | C  Small metal dowel (F893) x 4 |
| D  Hollow core locking nut (F892) x 4 | E  Large locking cam nut (F900) x 10 | F  Shelf Support (F180) x 16 |
| G  19mm Screw (F461) x 4 | H  13mm Screw (F63) x 8 | I  Nail (F51) x 33 |
| J   Screw  Washer x 2 Overbalance protector kit (F269) x 1 | | K  Handle (FBARH128) x 2 |
| L  Hinge plate (F523) x 4 | M  Hinge (F522) x 4 | |

Tools required



Rule



Flat-head screwdriver



Cross-head screwdriver



Scissors



Hammer




Eye protection
(when using a hammer or drill)



Electric drill
(do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

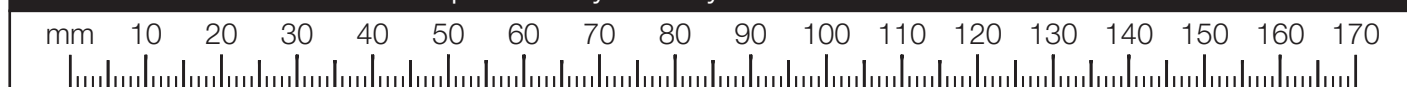

Assembly Instructions

Step 1



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

Prepare the left side

a: Fit 2 hinge plates **L** onto the left side **1**, making sure that the slot is facing towards the finished front edge.





b: Screw 5 metal dowels **B** into the holes on the left side **1**.

Note: Tighten metal dowels up fully against the panel.

c: Push 2 hollow core locking nuts **D** into the left side **1**, making sure that they are flush against the panel's surface.

Using a hammer, tap in the pin on the hollow core locking nut **D**.

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut **D**.

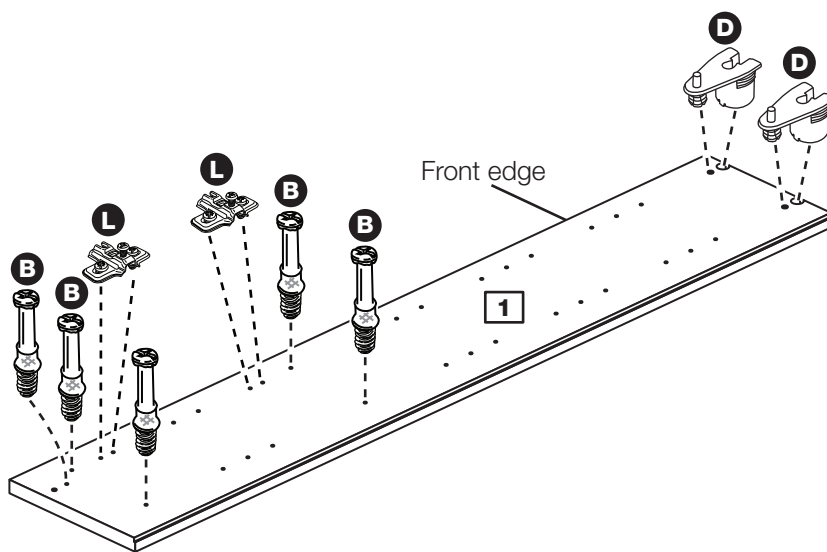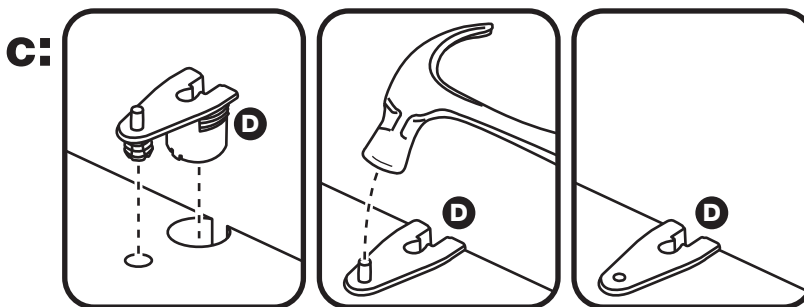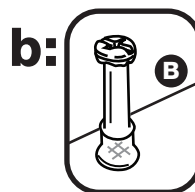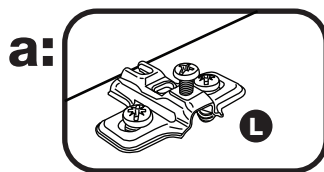

Assembly Instructions


Step 2

Prepare the right side

a: Fit 2 hinge plates **L** onto the right side **2**, making sure that the slot is facing towards the finished front edge.

b: Screw 5 metal dowels **B** into the holes on the right side **2**.

c: Push 2 hollow core locking nuts **D** into the right side **2**, making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut **D**.

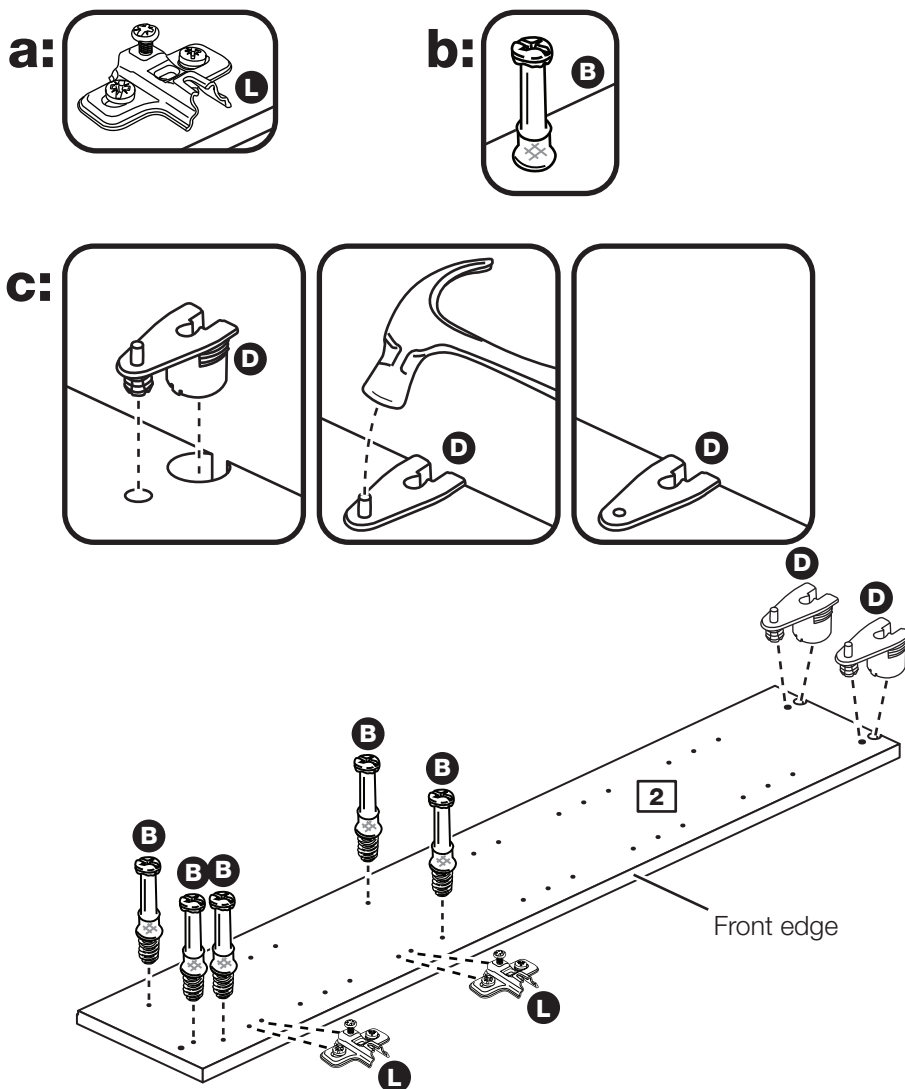


Step 3

Prepare the top

Screw 4 small metal dowels **C** into the holes on the top **4**.

Note: Tighten metal dowels up fully against the panels.

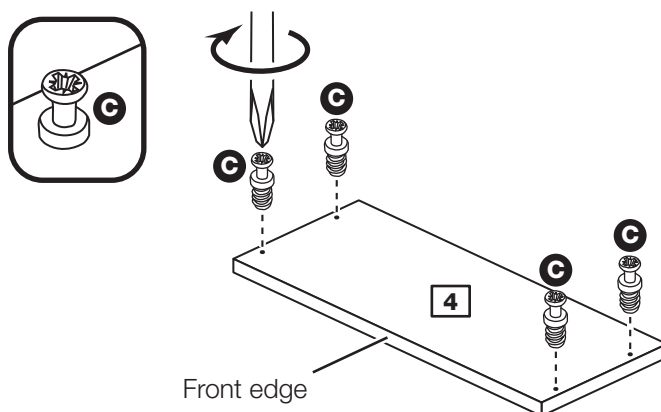

Assembly Instructions



Step 4

Join the right side to the top

Push the top **4** onto the right side **2**.

The 2 small metal dowels **C** fitted to the top **4** must slide into the top of the 2 hollow core locking nuts **D** fitted to the right side **2**.

Insert a screwdriver into the 2 hollow core locking nuts **D** and turn the nuts inside as far as they will go.

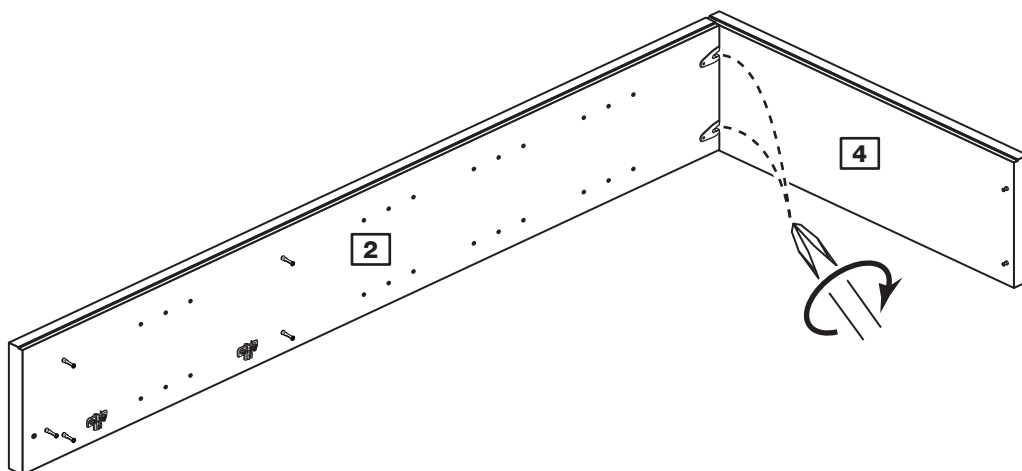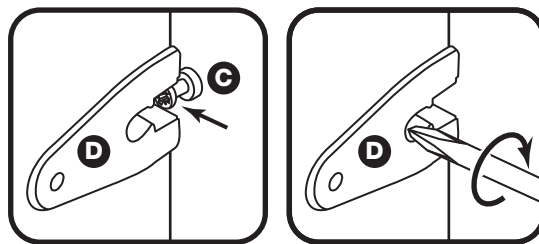


Step 5


Prepare the 2 horizontals

Insert 4 large locking cam nuts **E** into each horizontal **5** as shown.

Note: The arrow on the locking cam nut **must** point towards the hole in the edge of the panel.

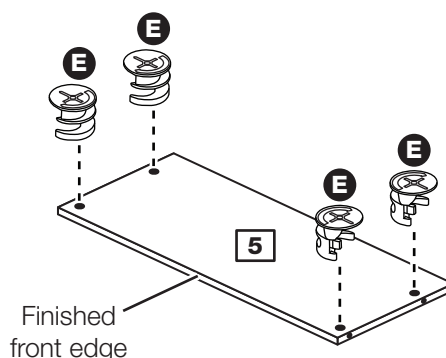

x 2

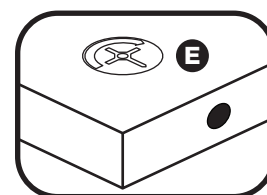


Assembly Instructions

Step 6

Fit the 2 horizontals

Push the horizontals **5** onto the right side **2**, as shown.

Use a screwdriver to tighten the 2 large locking cam nuts **E** fitted to each horizontal **5**.

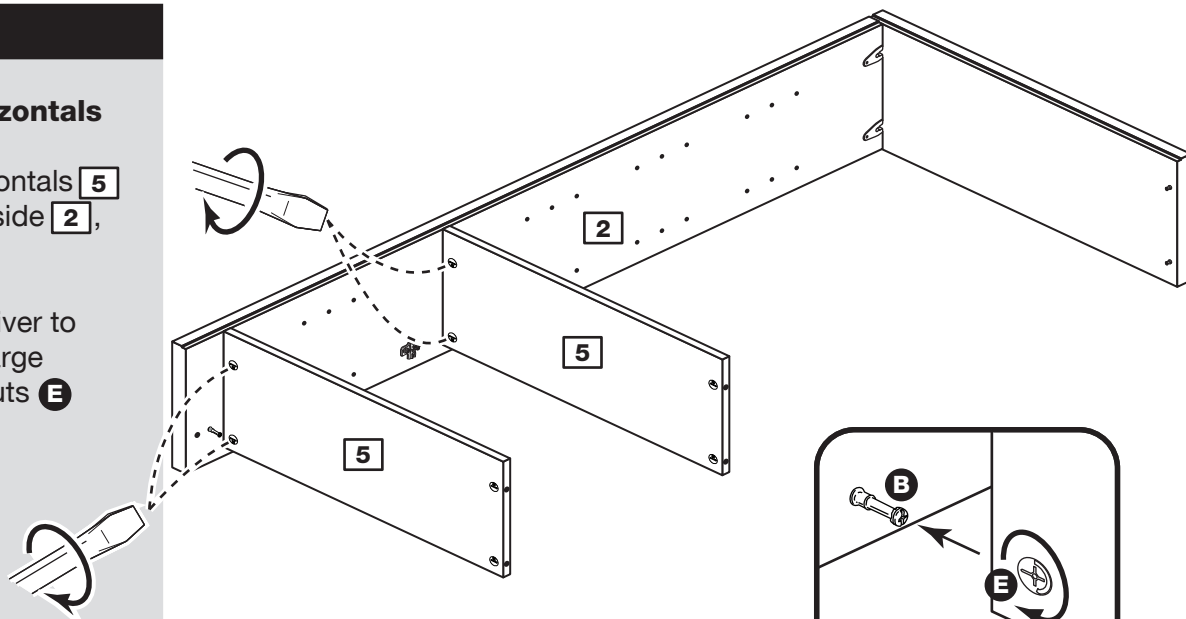

Note: Turn the large locking cam nuts **E** as far as they will go - more than 1/2 a turn.


Step 7

Prepare the plinth

Insert 2 large locking cam nuts **E** into the plinth **7**, as shown.

Tap a wooden dowel **A** into each end of the plinth **7**, as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

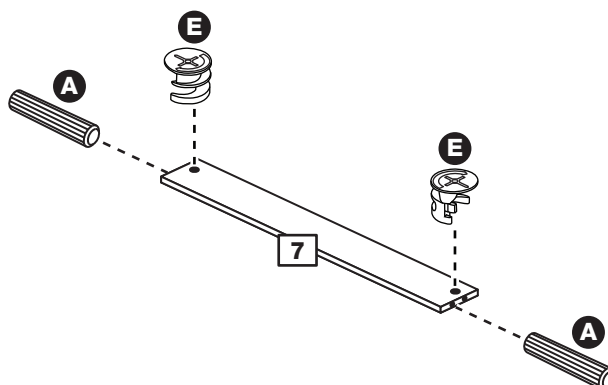


Assembly Instructions

Step 8

Fit the plinth

Push the plinth **7** onto the right side **2**, as shown.

Use a screwdriver to tighten the large locking cam nut **E** fitted to the plinth **7**.

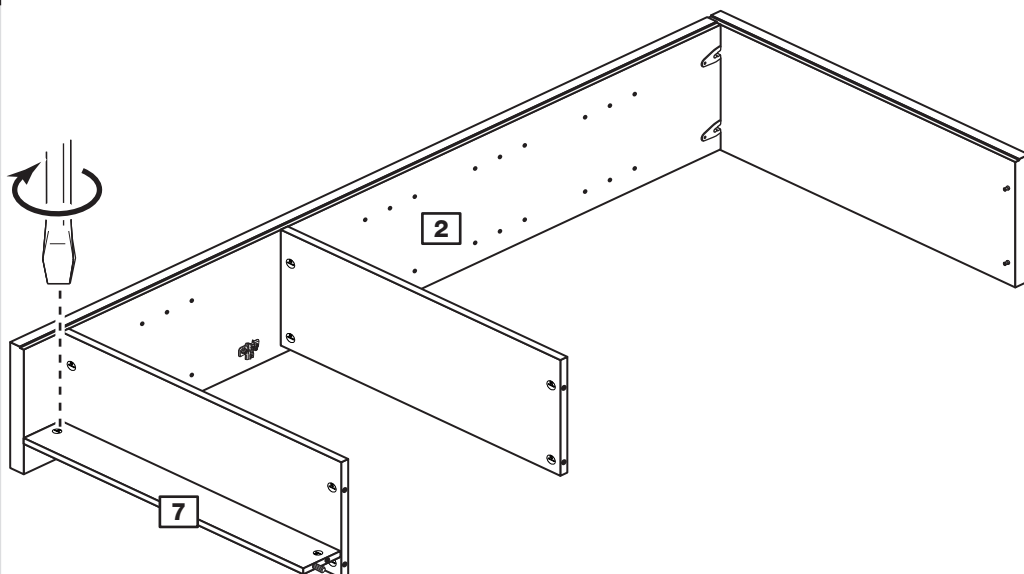

Step 9



Fit the left side

Push the left side **1** onto the unit.

The 2 small metal dowels **C** fitted to the top **4** must slide into the top of the 2 hollow core locking nuts **D** fitted to the left side **1**.

Insert a screwdriver into the 2 hollow core locking nuts **D** and turn the nuts inside as far as they will go.

Use a screwdriver to tighten the 5 large locking cam nuts **E** fitted to the 2 horizontals **5** and the plinth **7**.

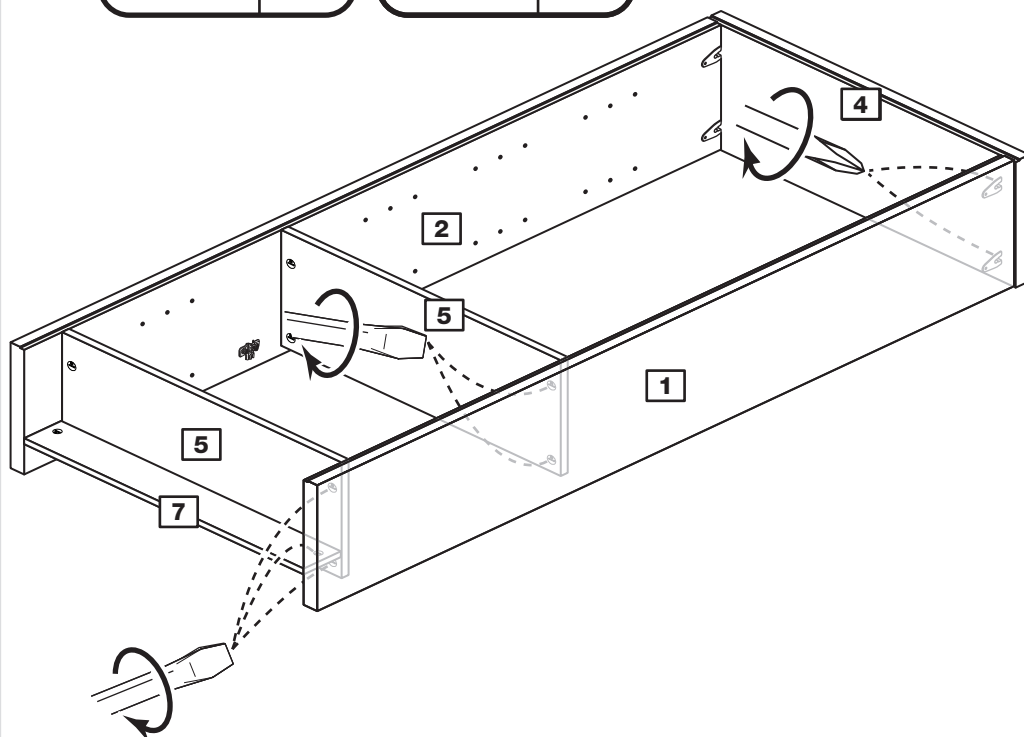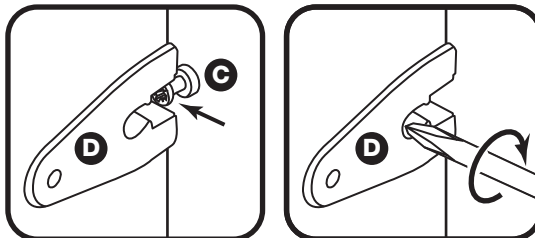

Assembly Instructions

Step 10

Fit the back

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **3** onto the unit.

Nail **1** around the outside edges of the back **3**.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.




Warning: The unit is heavy. Lift with care.



Squaring up a Chest and fitting the Back Panel

www.youtube.com/watch?v=Feal6541z7o



a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

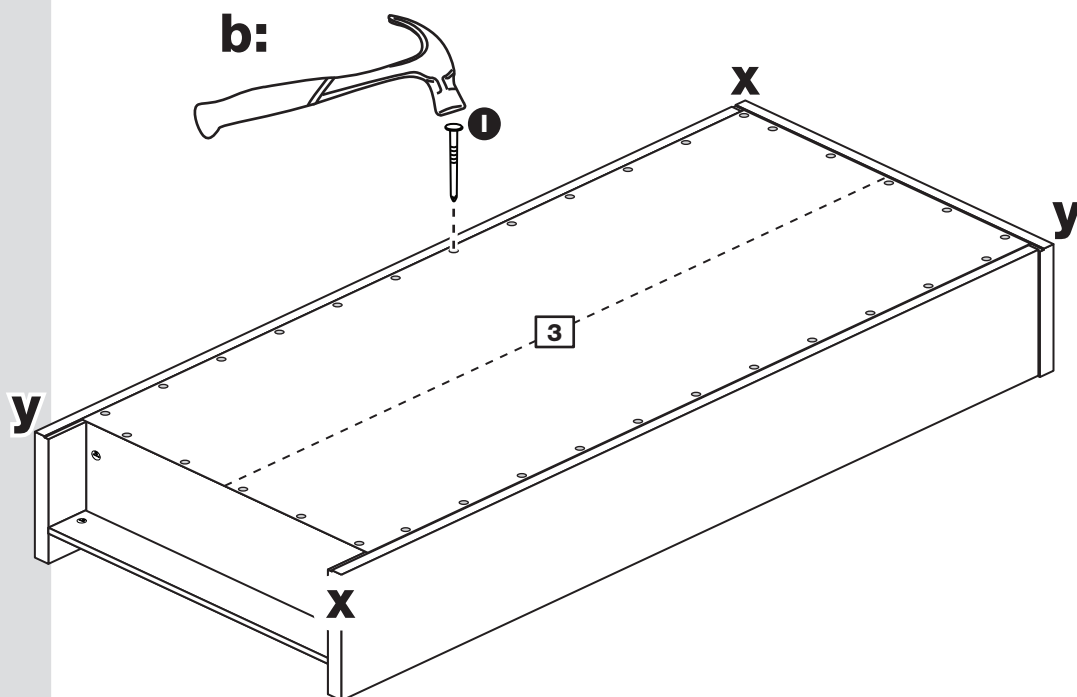

Step 11

Fit the shelf supports

Push 4 shelf supports **F** into the side panels at the desired height for each of the 4 shelves.

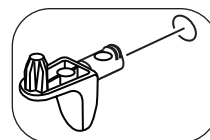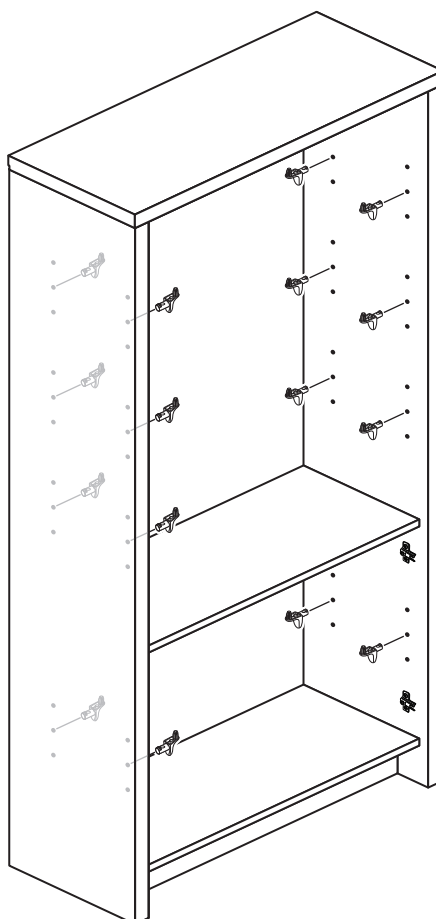


Assembly Instructions

Step 12

Fit the shelves

Place the 4 loose shelves **6** onto the shelf studs **F**.

F.

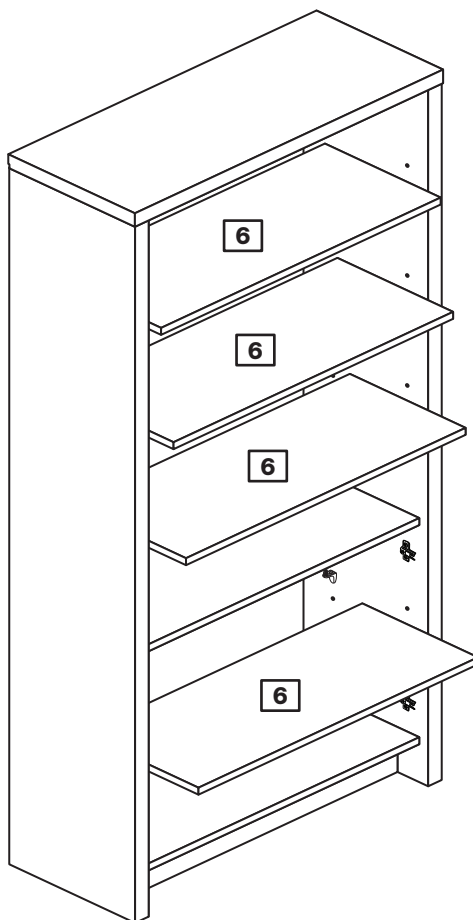

Step 13

Prepare the 2 doors

Push fit 2 hinges **M** into each door **8** and **9**.




Secure each hinge with 2 screws **H**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the front edge of the door.



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

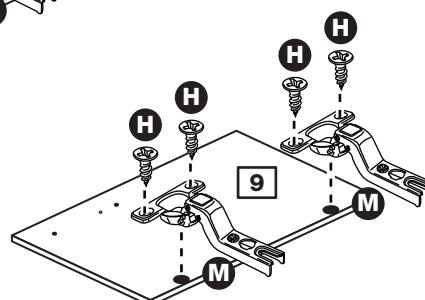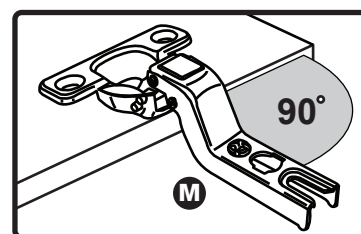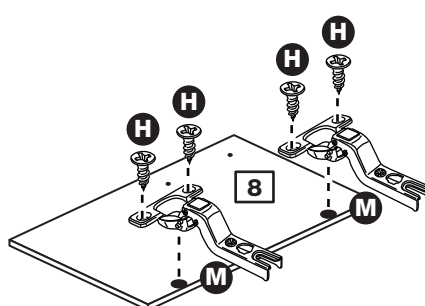

Assembly Instructions

Step 14

Fit doors and handles

2 people are needed here

Note: The easiest way to attach the doors **8** and **9** is to fit the top hinge first, then align and fit the other hinge.

a: Push the hinge **M** onto the front part of the hinge plate **L**.

b: Keep the hinge **M** FLAT against the hinge plate **L** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **M** must be flat against the hinge plate **L** prior to any adjustment.



d: The hinge **M** must NOT be AT AN ANGLE to the hinge plate **L** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **K** to each door **8** and **9** using 2 screws **G**.



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

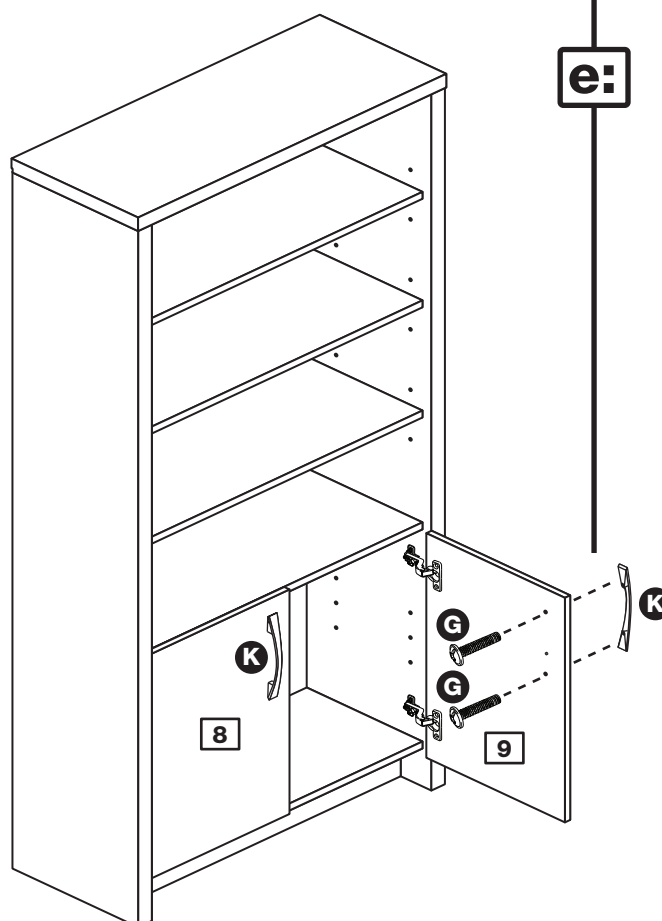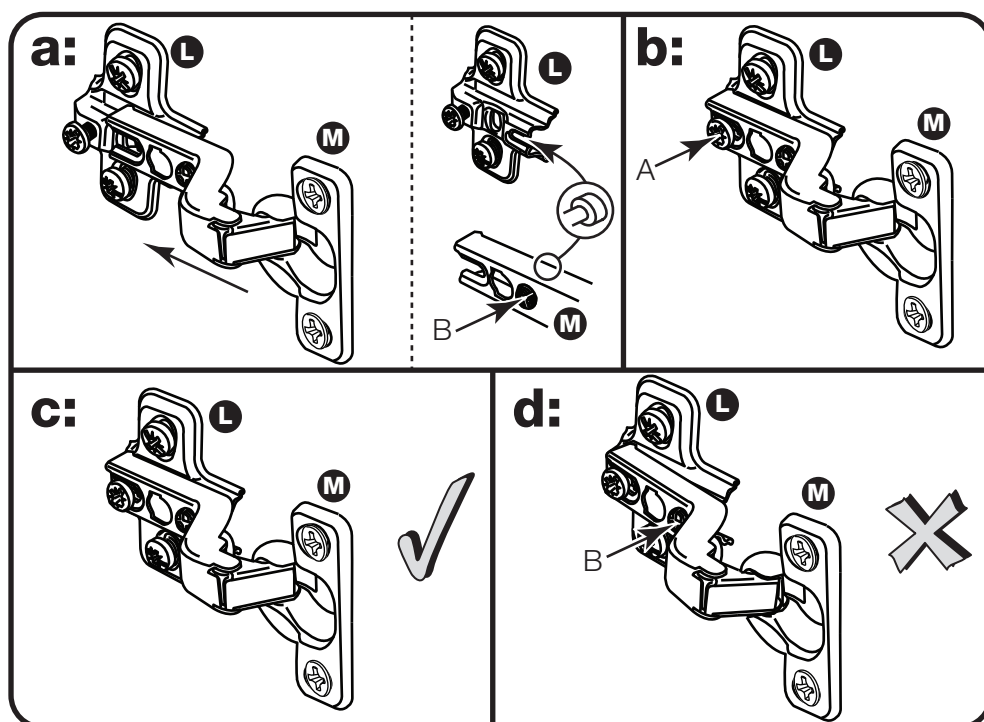

Assembly Instructions

Step 15

Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.

Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.


d: Sideways adjustment.

To move door 'out' loosen screw C. To move door 'in' tighten screw C.



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

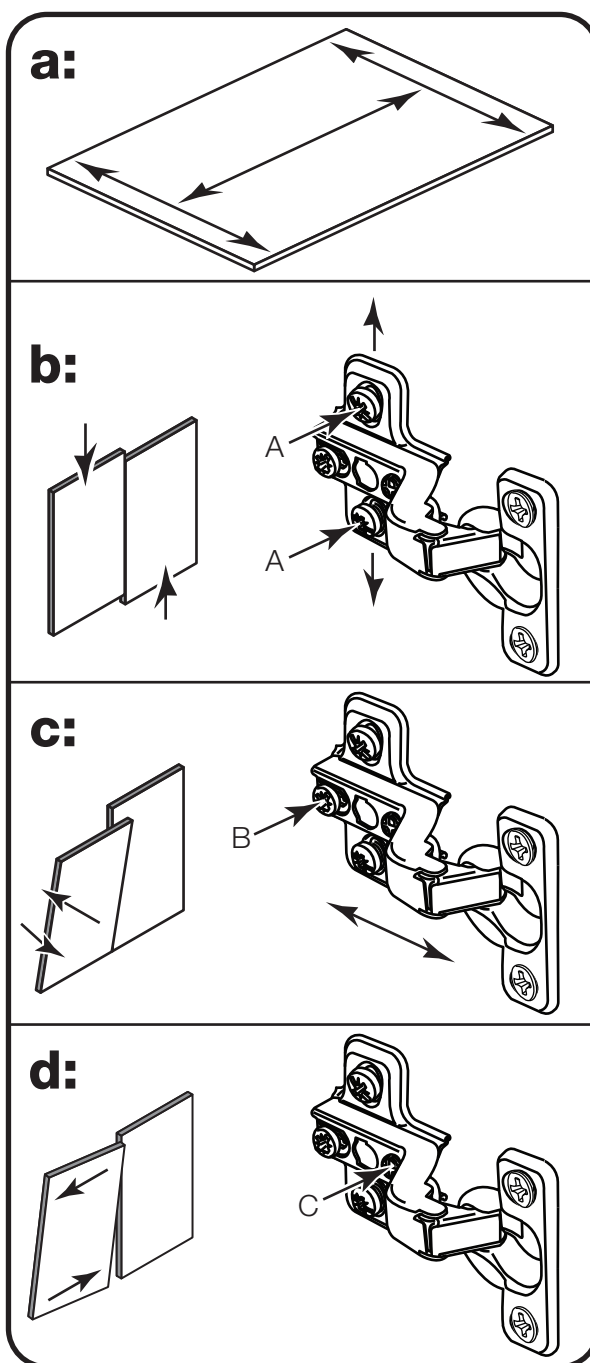

Assembly Instructions

Step 16

Fit the overbalance protector kit

To prevent possible overbalancing this unit **must be secured** to a suitable wall by fitting of the overbalance protector kit **J** to the unit.

Wall fixings are not supplied as they will need to suit the wall type.


Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.




Warning: The unit is heavy. Lift with care.

WARNING!

In order to prevent overturning this product must be used with the wall attachment device provided

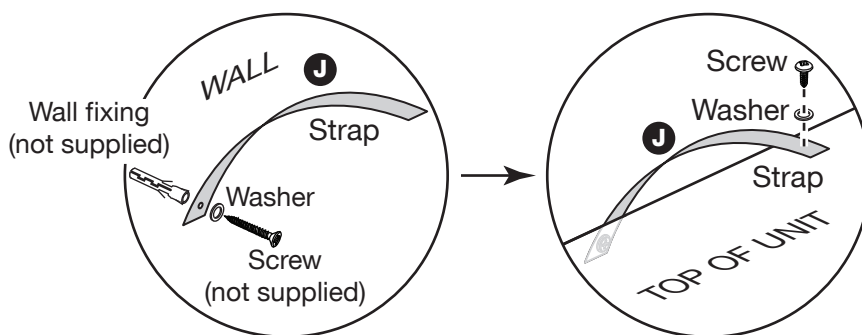


See the next page for a guide to wall mounting and fixings

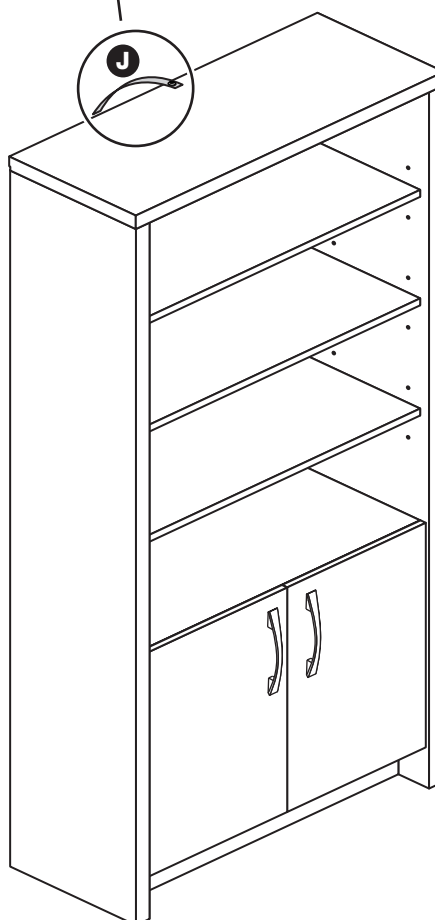

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:

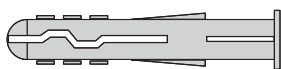

- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:  Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

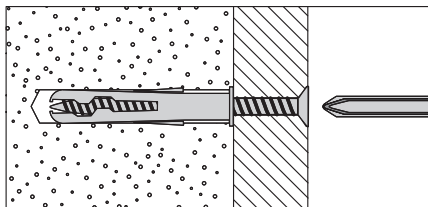


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

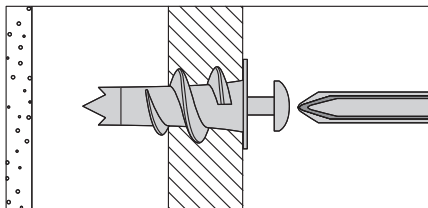


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

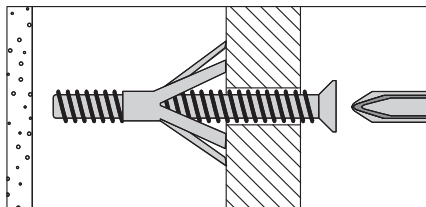


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

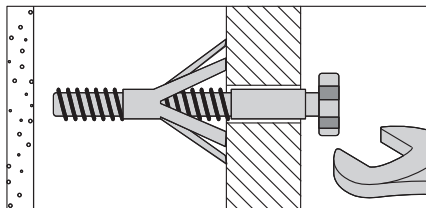


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

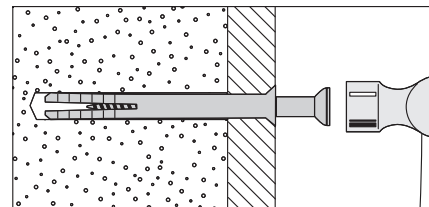

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

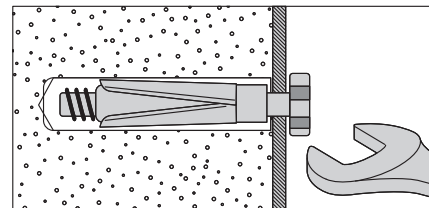

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.




Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Assembly Instructions

Step 17

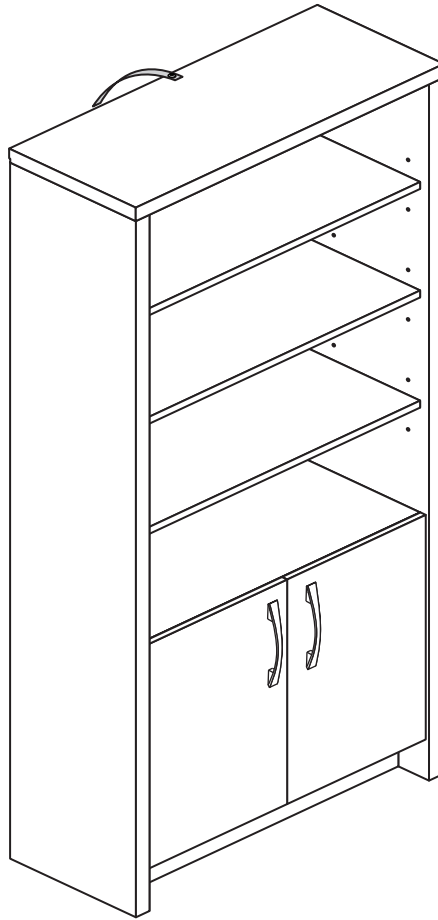

Assembly is complete

Please remove any blue protective film from panel edges and clear protective film from panel surfaces