


Spirit 100 Corded Telephone

User Guide

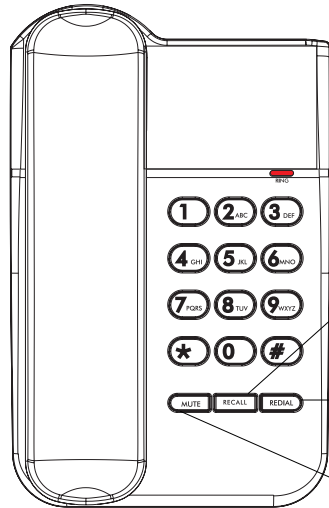


Please keep the packing materials in case you later need to return or transport your Spirit 100.

Please keep your sales (till) receipt, which is your guarantee.

RECALL button
you may need this if you are using your Spirit 100 on a PBX or with BT'S Select Services

LAST NUMBER REDIAL
press this to make a repeat call to the last number dialled

Mute button
press and hold down this button to mute the mouth-piece (during a call so the person on the other end can't hear you)

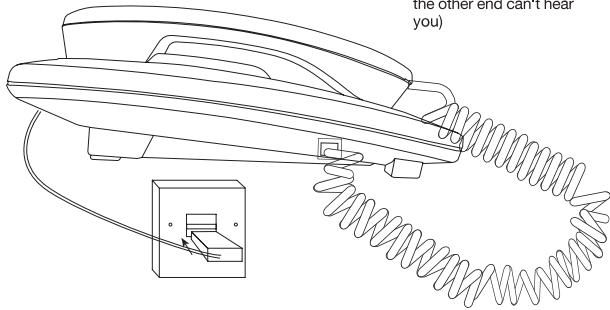

Value Range

1 Making and answering calls

To make a call

- 1 Lift the handset and wait for Dial tone
- 2 Dial the telephone number using the keypad

Last Number Redial

To make a repeat call to the last number you dialled (up to 32 digits):

- 1 Lift the handset and wait for Dial tone
- 2 Press **REDIAL**

MUTE

While you are on a call, to mute the mouthpiece so that your voice cannot be heard

- 1 Press and hold **MUTE**

Use on a PBX

If you are using your Spirit 100 on a PBX and the PBX User Guide tells you to press **RECALL**, press the **RECALL** button on your Spirit 100.

To make a call:

- 1 Key In the outside line access digit then press **REDIAL**
- 2 Dial the telephone number

Technical details

Standard	Spirit 100 Telephone
Temperature range	Operating 0 °C to 40 °C Storage -20 °C to 60 °C
PBX compatibility	Timed break recall: 100 ms. Signalling type: DTMF (dual-tone multifrequency) also called tone dialing.
Network connection	This equipment is intended to be used in the UK only. Operation on other countries' PSTN termination points

2 Troubleshooting

! The Spirit 100 must be serviced by trained engineers. NEVER attempt any repairs or adjustments yourself - you could invalidate the Guarantee.

If the phone does not ring ...

Make sure your Spirit 100 is fully plugged into the telephone line socket.

Check that the total REN value of all equipment connected to your telephone line is no more than 4. Disconnect one or more telephones and see whether that helps.

If you cannot make Calls ...

Make sure your Spirit 100 is fully plugged into the telephone line socket.

Disconnect all other instruments connected to the same line as the Spirit 100 and see whether you can make a call.

Disconnect the Spirit 100 from the telephone line and plug a different phone into the socket. Try making a call. If this works, the line is OK.

If you are using a two-way socket adapter, remove it and plug a telephone directly into the socket. If the call now works, the adapter may be faulty.

If you think the fault may be on the exchange line, contact the service provider.

Unpacking your Spirit 100 Telephone

In the box are:

- Base Unit
- Handset
- Coiled Handset cord
- Telephone line cord for Base Unit
- User manual

Keep the packaging materials in a safe place in case you later need to transport the unit.

Keep your sales (till) receipt, which is your guarantee.

3

Guarantee and service

This product is guaranteed against manufacturing defects for a period of 1 Year.

This does not cover the product where the fault is due to misuse, abuse, of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes

MK9 2NW

BINATONE TELECOM PLC
1 Apsley Way London NW2 7HF United Kingdom
Tel: +44(0) 20 8955 2700 Fax: +44(0) 20 8344 8677
e-mail: binatoneuk@binatone telecom.co.uk

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment: Corded phone
Model Name: Spirit 100
Country of Origin: China
Brand: Binatone

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to **electromagnetic compatibility (EMC)** and the European Community Directive 2006/95/EC relating to **Electrical Safety**.

Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

EMC: **EN 55022:2006+A1**
EN 55024:1998+A1+A2

Electrical Safety: **EN 60950-1:2006+A11:2009**

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.

Manufacturer / Importer
(signature of authorized person)

Paul



London,

Signature: Place & Date: 23th, Aug-11

Product Operation Director

Connection and conditions for use

You can connect your Spirit 100 phone to a direct exchange line (DEL) - a line connected to a local exchange, with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX. Do not connect the Spirit 100 phone as an extension to a pay phone.

The **ringer equivalence numbers (RENs)** of all instruments (phones, fax machines, etc.) connected to an exchange line **must not add up to more than 4** - otherwise, one or more of them may not ring and/or answer calls correctly.

The Spirit 111 phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.



Waste electrical products must not be disposed of with household waste.


This equipment should be taken to your local recycling centre for safe treatment.

Wallmounting instructions

Please read the instructions on this template carefully before you start to wall mount your telephone. If you prefer, you can stand your telephone on a level surface

BE CAREFUL - check that there are no electrical wires hidden in the wall.

- 1 Use this template for wallmounting, marking the wall at the fixing centres. The marks should be 102mm apart
- 2 Using screws (not supply with the unit) screw in at the two marked locations, leaving approx. 7mm (1/4") between the wall and underside of screw head.
- 3 Tuck the telephone line cord into the grooves on the cradle. Make sure that the parking hook lever is pushed to the top position.
- 4 Hang the cradle unit on the screws using the wallmounting slots on the underside of the unit. You may need to remove the telephone from the wall and tighten the screws so that the cradle is securely fixed and does not wobble.
- 5 Rest the handset on the cradle using the parking hook on the cradle and the parking recess under the earpiece on the handset

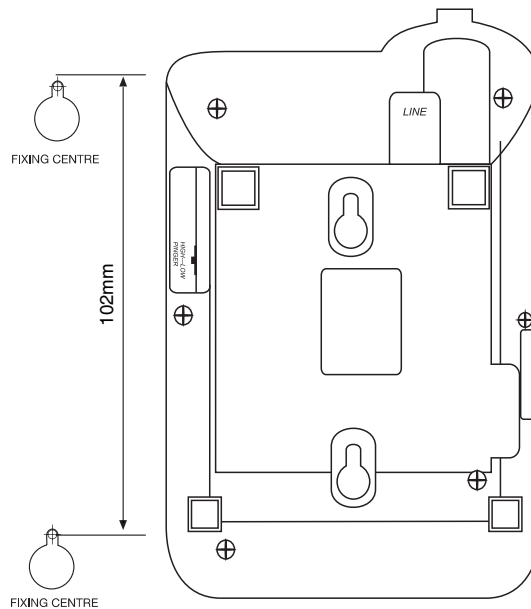

Value Range

Reset the hook on the cradle.

This hook is designed to keep the handset in place when the telephone is vertical on the wall. The hook on the upper part of the cradle is there to support the handset if you need to leave the phone temporarily during a call.

Parking Hook

