

Lawson - Desk


Assembly Instructions - Important: Retain these instructions
for future reference

402/4439

412/6416

412/3392

797/7916

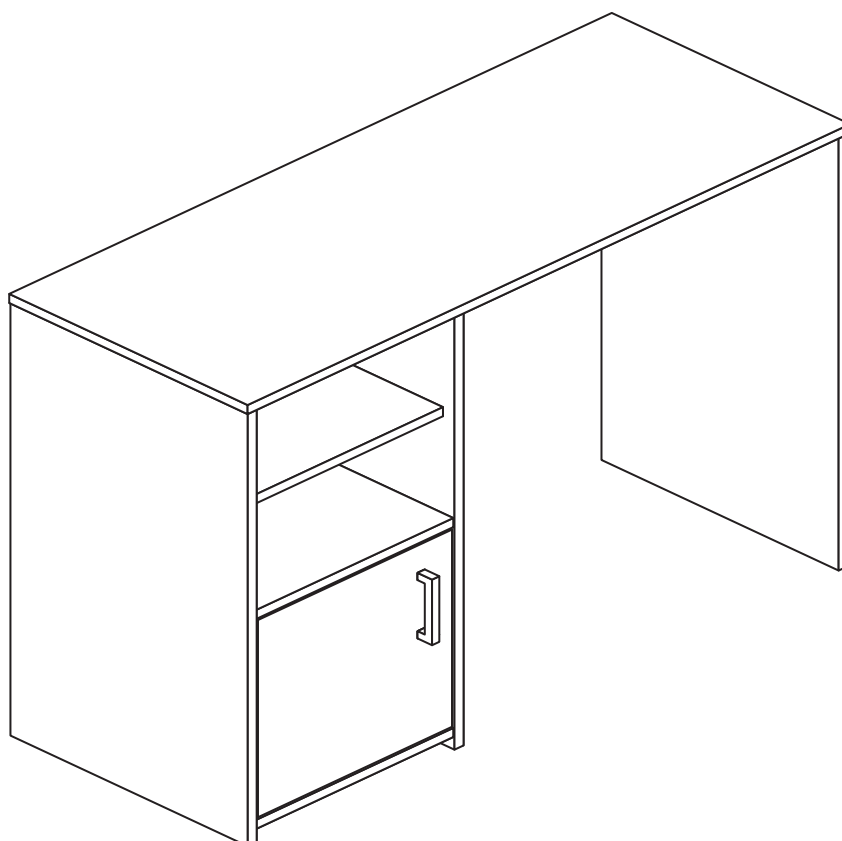

WARNING!

**In order to prevent overturning, this product must be
used with the 2 wall attachment devices provided**

Dimensions

Width - 100cm

Depth - 39.5cm

Height - 73.5cm

More help is available throughout this
booklet by scanning in the QR codes
or typing in the links



**MADE IN
BRITAIN**

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 20kgs. Please lift with care.
- Assembly to be carried out by a competent adult only.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- During assembly children should be kept away from the product due to possible risk of injury.
- Installation shall only be carried out exactly according to the manufacturer's instructions - otherwise a safety risk can occur if incorrectly installed.

- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

- **WARNING:** To prevent possible overbalancing this unit **must be secured** to a wall using the 2 overbalance protector kits supplied.
- Dispose of all packaging carefully and responsibly.
- Do not use this item if any components are missing or damaged.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Regularly check all fastenings to ensure that they are properly tightened.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below


When applicable, remove any protective film from the panels before they are used

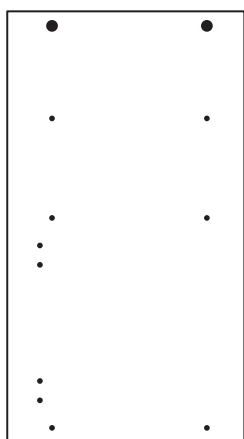


1 Left End (DF2766)
(71.6 x 39.2cm)

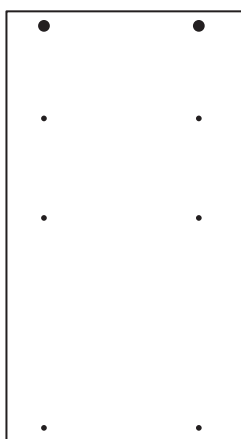


2 Upright (DF2767)
(71.6 x 39.2cm)

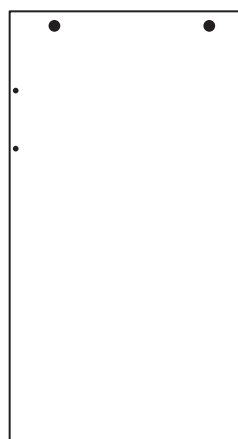


3 Right End (DF2768)
(71.6 x 39.2cm)

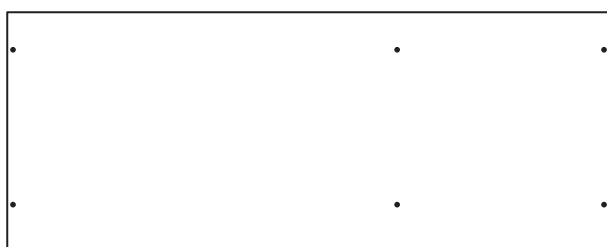

4 Top (DF2765)
(99.6 x 39.6cm)

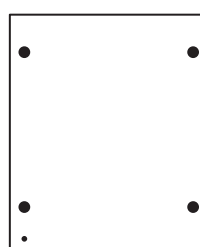


5 Base (DF2769)
(32.7 x 39cm) x 2




6 Shelf (DF2770)
(32.7 x 37.3cm)



7 Modesty (DF2772)
(62 x 15.7cm)

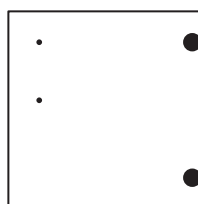

8 Door (DF2771)
(32.6 x 32.1cm)



9 Back (X707-353)
(70.7 x 35.3cm)



Components - Fittings








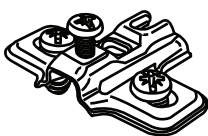
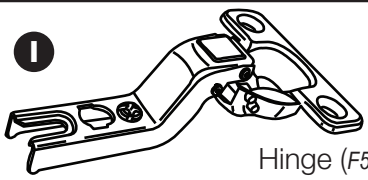
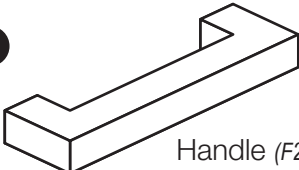
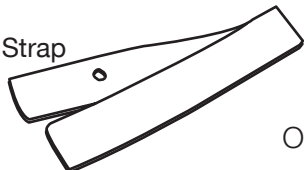


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Metal dowel (F901) x 18	B  Large locking cam nut (F900) x 18	C  Shelf stud (F110) x 5
D  25mm Screw (F50) x 2	E  13mm Screw (F63) x 4	F  Nail (F51) x 14
G  Plastic Nail (F91) x 6	H  Hinge plate (F523) x 2	I  Hinge (F522) x 2
J  Handle (F236) x 1	K   Screw  Washer x 2 Overbalance protector kit (F269) x 2	

Tools required



Cross-head screwdriver




Scissors




Hammer




Eye protection (when using a hammer or drill)

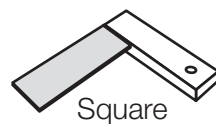

Square

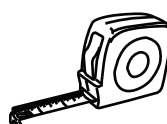

Rule



Bradawl

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Prepare the upright

Screw 4 metal dowels **A** into the upright **2**.


Note: Tighten the metal dowels up fully against the panels.

Insert 2 large locking cam nuts **B** into the upright **2**.


Note: The arrow on the locking cam nut **must** point towards the hole in the edge of the panel.

Turn the upright over

Screw 2 metal dowels **A** into the upright **2**.

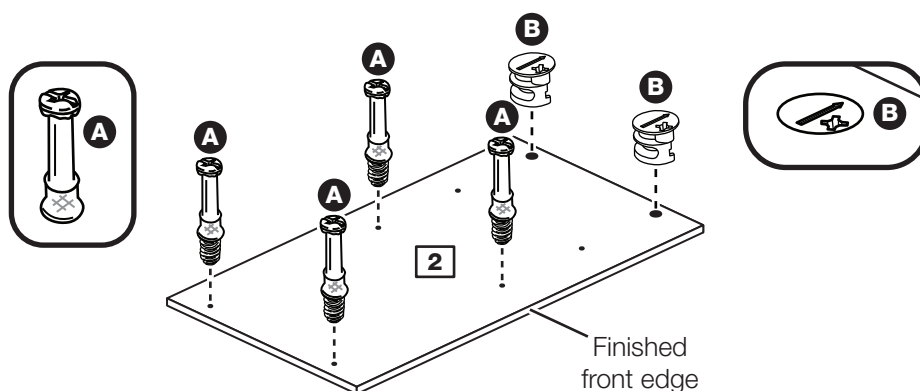


Turn the upright over

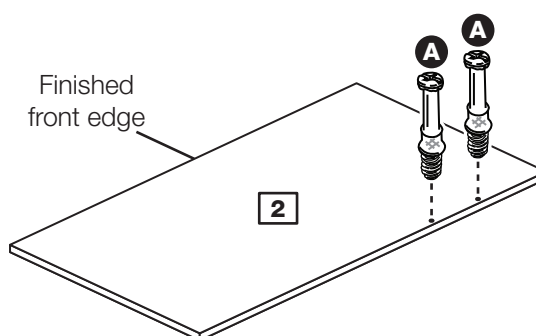

Step 2

Prepare the 2 base panels

Insert 4 large locking cam nuts **B** into each of the 2 base panels **5**.

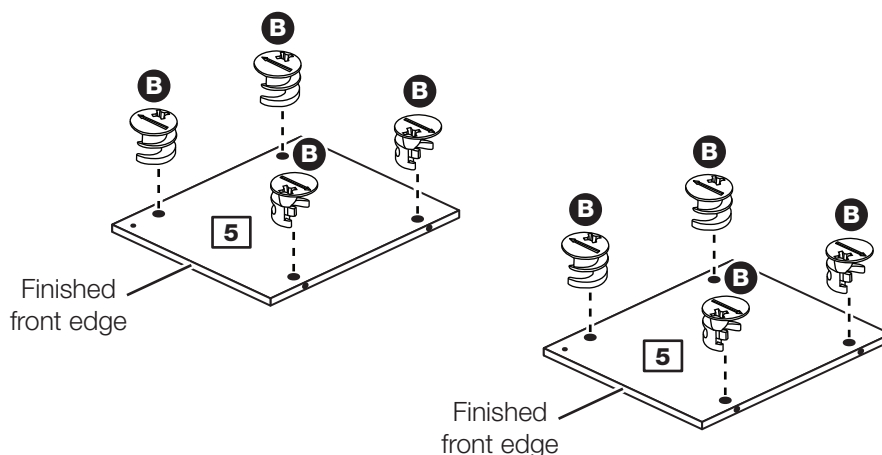

Assembly Instructions


Step 3

Fit a base to the upright

Push a base **5** onto the upright **2**.

Use a screwdriver to tighten the 2 large locking cam nuts **B** fitted to the upright **2**.

Note: Turn the large locking cam nuts **B** as far as they will go - more than 1/2 a turn.

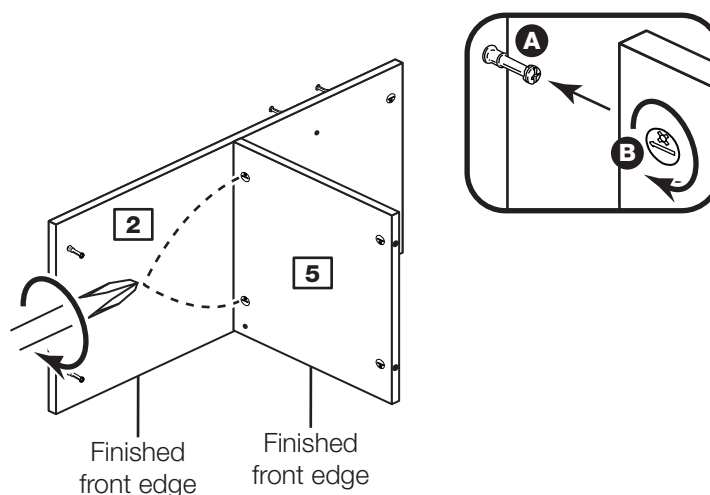


Step 4

Fit the other base to the upright

Push the base **5** onto the upright **2**.

Use a screwdriver to tighten the 2 large locking cam nuts **B** fitted to the upright **2**.

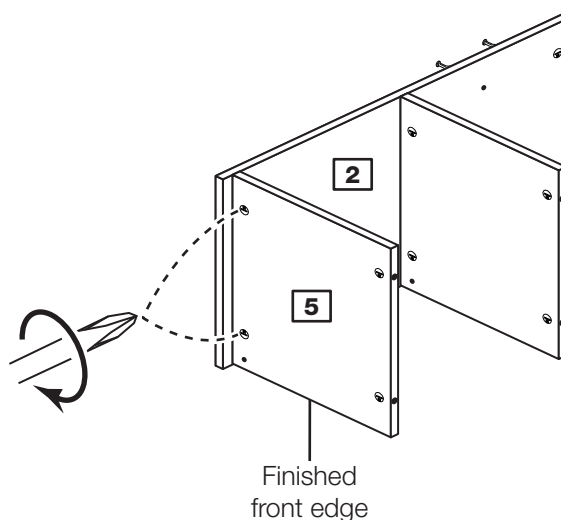

Step 5

Prepare the left end

Screw 4 metal dowels **A** into the left end **1**.


Insert 2 large locking cam nuts **B** into the left end **1**.

Fit 2 hinge plates **H** onto the left end **1**, making sure that the slot is facing towards the finished front edge.



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

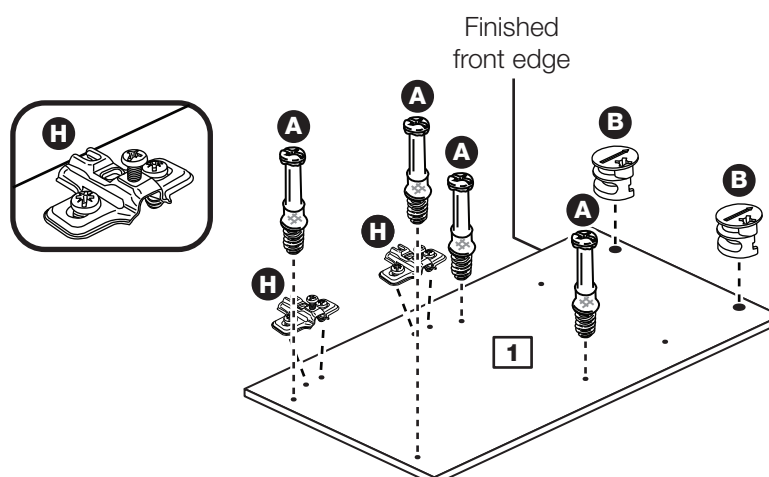


Assembly Instructions

Step 6

Fit the left end

Push the left end **1** onto the 2 base panels **5**.


Use a screwdriver to tighten the 2 large locking cam nuts **B** fitted to each of the 2 base panels **5**.

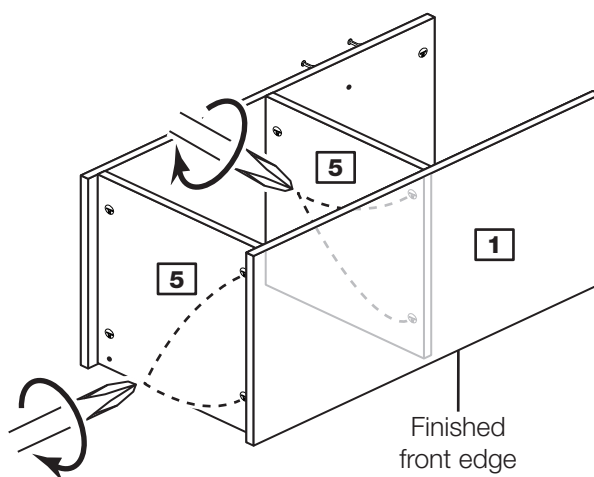

Step 7

Prepare the modesty

Insert 4 large locking cam nuts **B** into the modesty **7**.

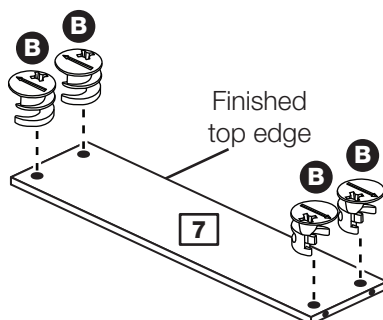


Step 8

Prepare the right end

Screw 2 metal dowels **A** into the right end **3**.

Insert 2 large locking cam nuts **B** into the right end **3**.

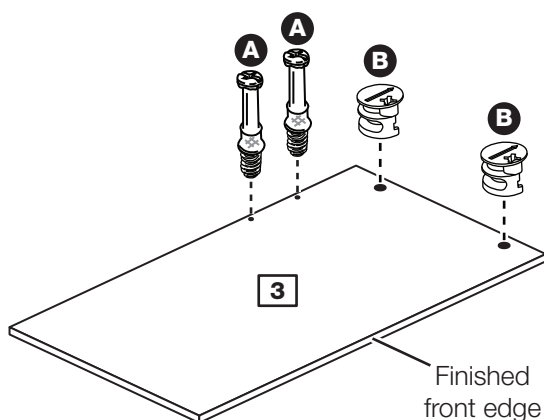

Assembly Instructions


Step 9

Fit the modesty

Push the modesty **7** onto the upright **2**.

Use a screwdriver to tighten the 2 large locking cam nuts **B** fitted to the modesty **7**.

Note: Support the modesty until the right end has been fitted in the next step.

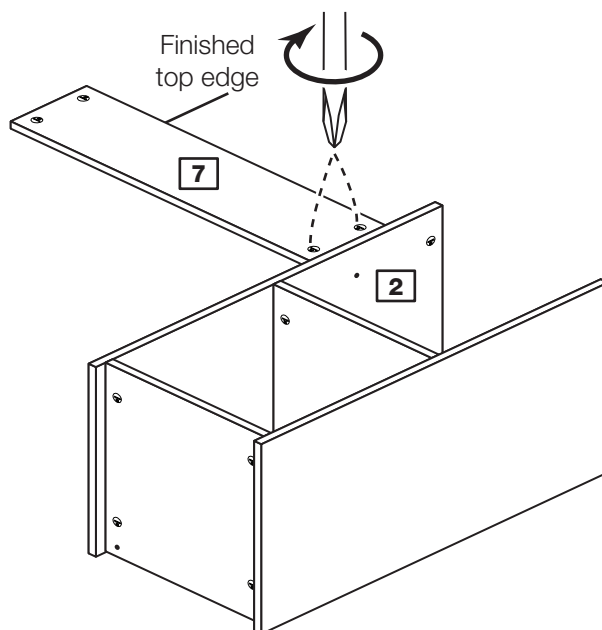


Step 10

Fit the right end

Push the right end **3** onto the modesty **7**.


Use a screwdriver to tighten the 2 large locking cam nuts **B** fitted to the modesty **7**.

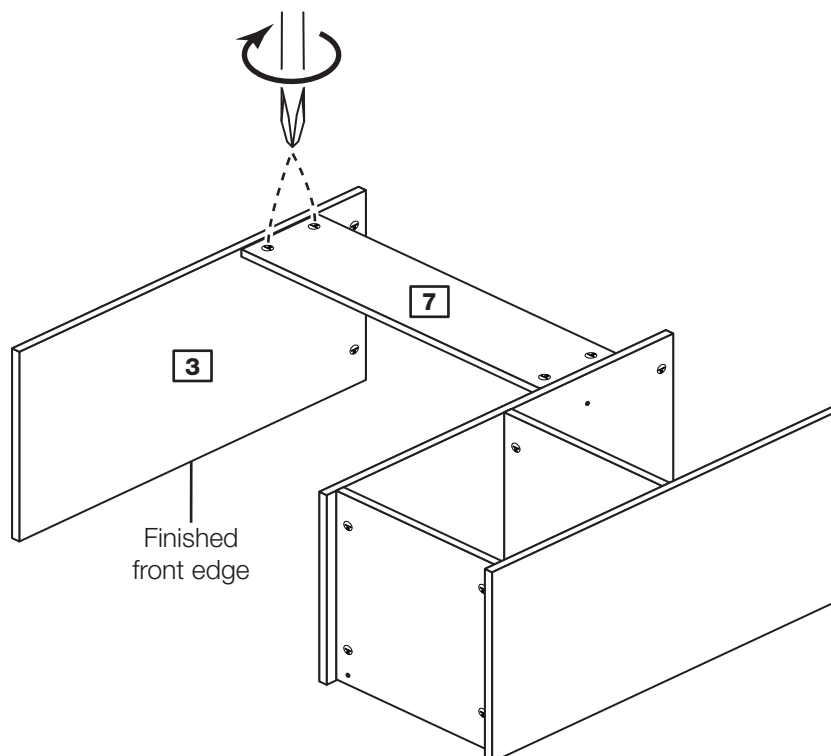

Step 11

Prepare the top

Screw 6 metal dowels **A** into the top **4**.

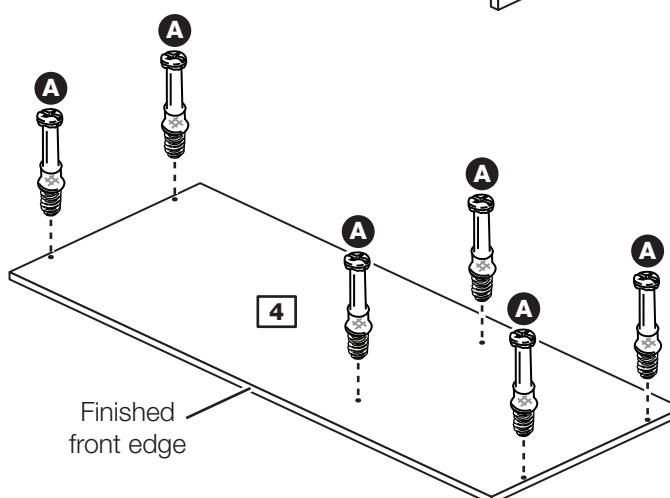


Assembly Instructions

Step 12

Fit the top

Push the top **4** onto the assembly.

Use a screwdriver to tighten the 6 large locking cam nuts **B** fitted to the left end **1**, the upright **2** and the right end **3**.

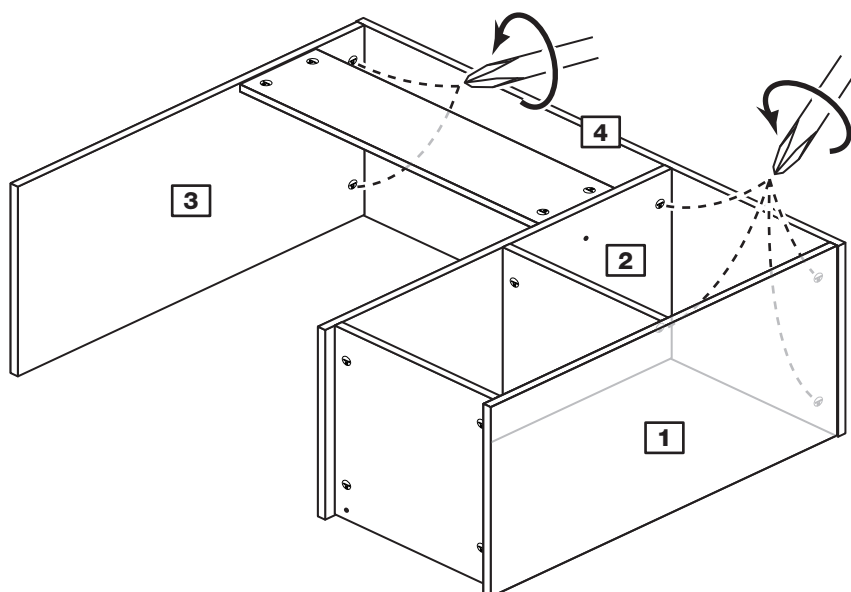

Step 13

Fit the back

a: Square up the unit by making sure that measurement **x to x** equals **y to y**.

b: Place the back **9** onto the unit.

Nail **F** around the outside edges of the back **9**.


Note: Nails should be spaced about 150mm apart.



Squaring up a Chest and fitting the Back Panel

www.youtube.com/watch?v=Feal6541z7o

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

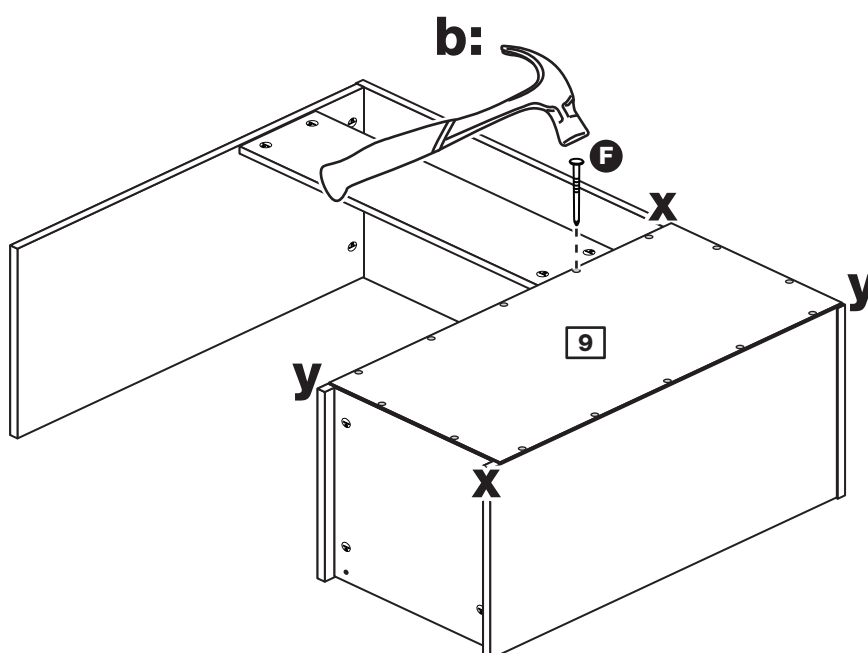

Assembly Instructions

Step 14


Fit the 6 plastic nails

Tap 2 plastic nails **G** into the bottom edge of each of the left end **1**, upright **2** and right end **3**.

Carefully stand the unit up for the next step.




Warning: The unit is heavy. Lift with care.

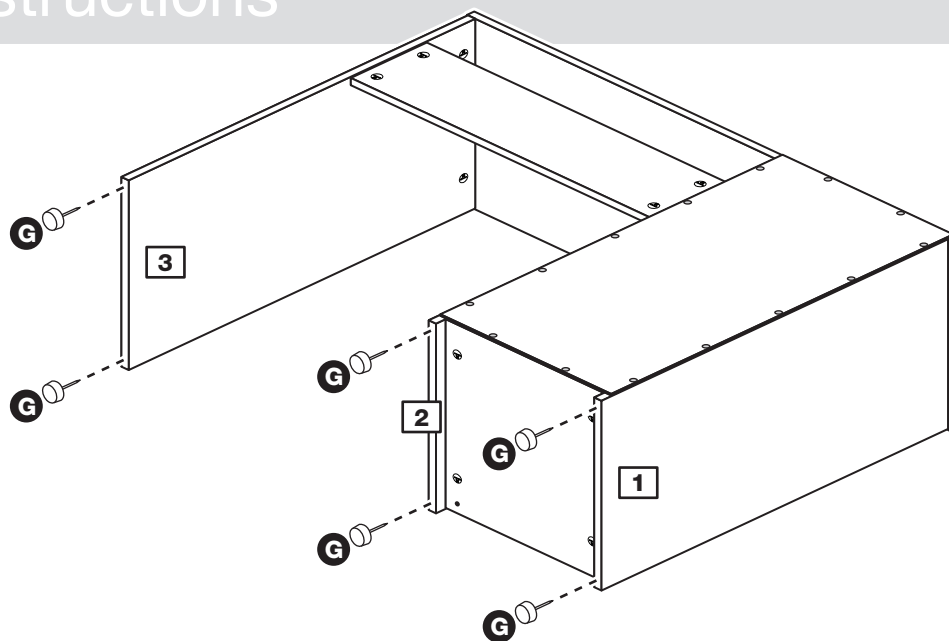

Step 15

Fit 4 shelf studs


Insert 4 shelf studs **C** into the holes shown.

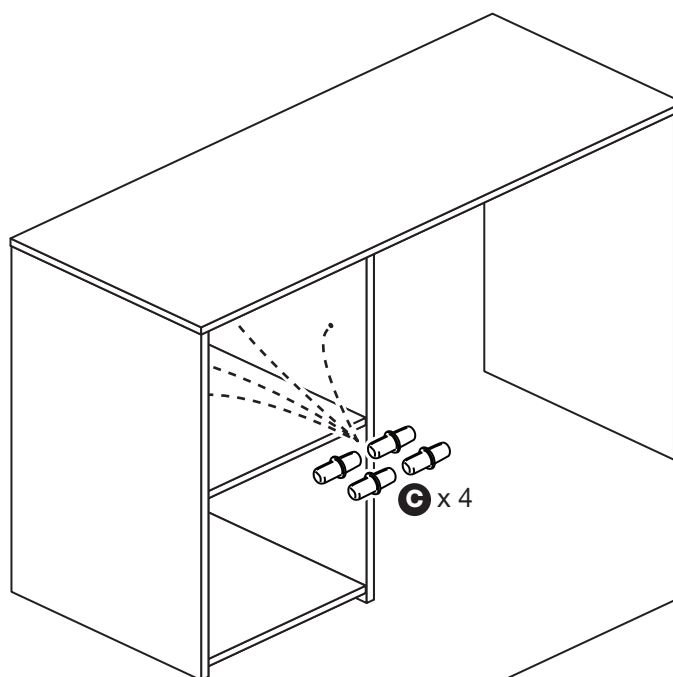

Step 16

Fit the shelf

Lower the shelf **6** down onto the shelf studs **C**.

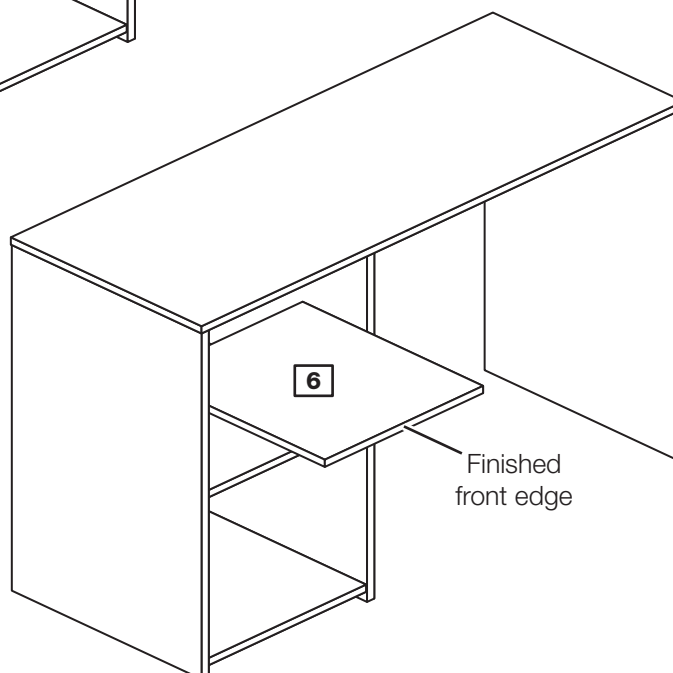


Assembly Instructions

Step 17

Fit the door stop

Push the remaining shelf stud **C** up into the hole in the corner of the upper base **5** to act as a door stop.

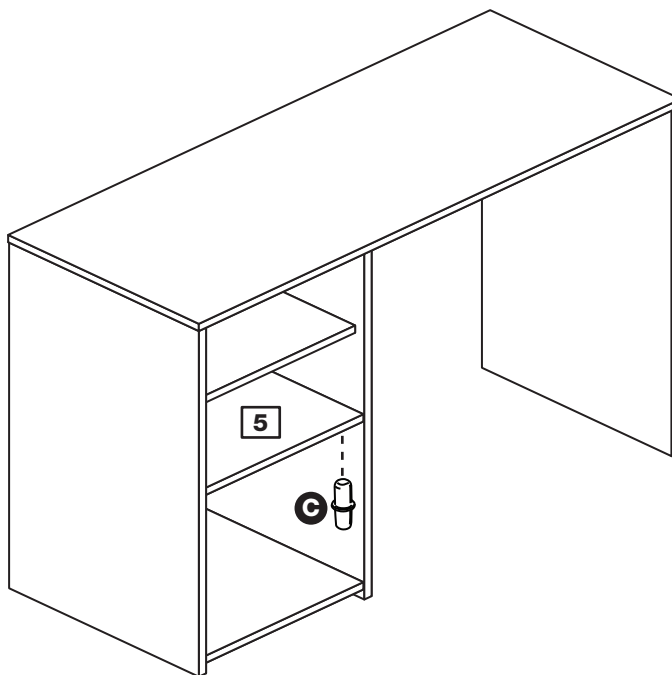

Step 18

Prepare the door

Push fit 2 hinges **I** into the door **8**.



Secure each hinge with 2 screws **E**.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

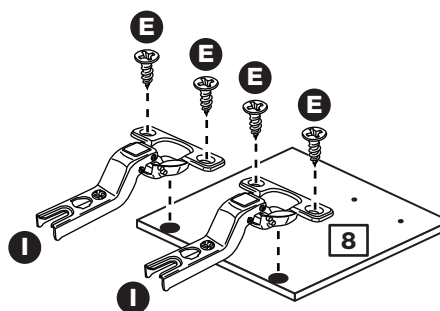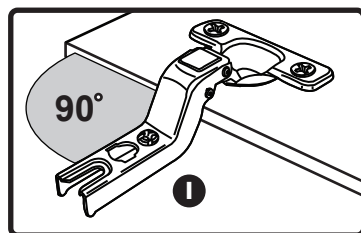

Assembly Instructions

Step 19



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

Fit door and handle

Note: The easiest way to attach the door **8** is to fit the top hinge first, then align and fit the other hinge.



a: Push the hinge **I** onto the front part of the hinge plate **H**.
The recess at the bottom of screw B goes into the slot in the hinge plate.

b: Keep the hinge **I** FLAT against the hinge plate **H** as you slide it across as far as it will go. Tighten screw A.

c: The hinge **I** must be flat against the hinge plate **H** prior to any adjustment.

d: The hinge **I** must NOT be AT AN ANGLE to the hinge plate **H** when assembled. This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle **J** to the door **8** using 2 screws **D**.

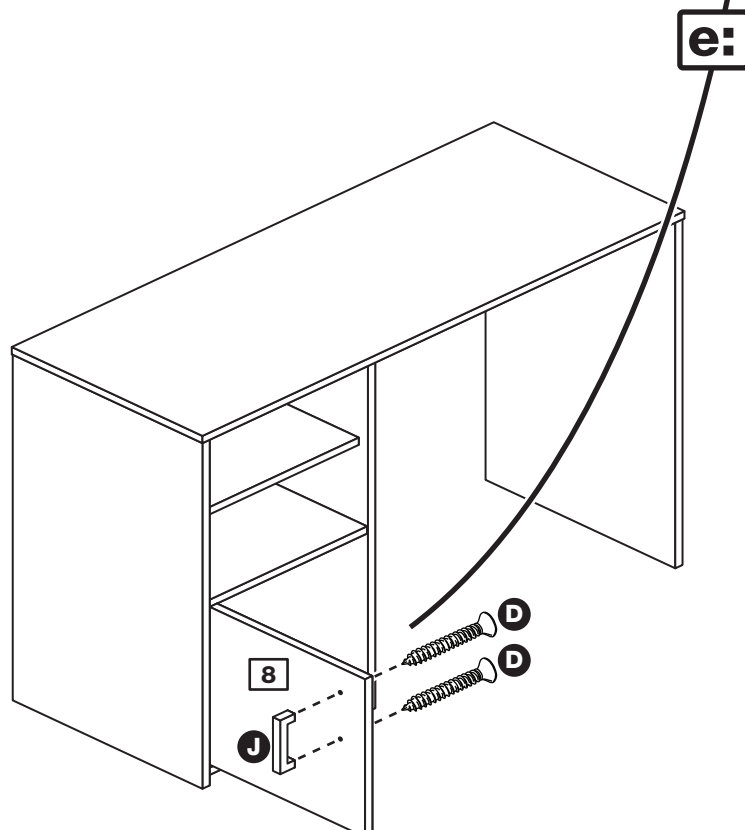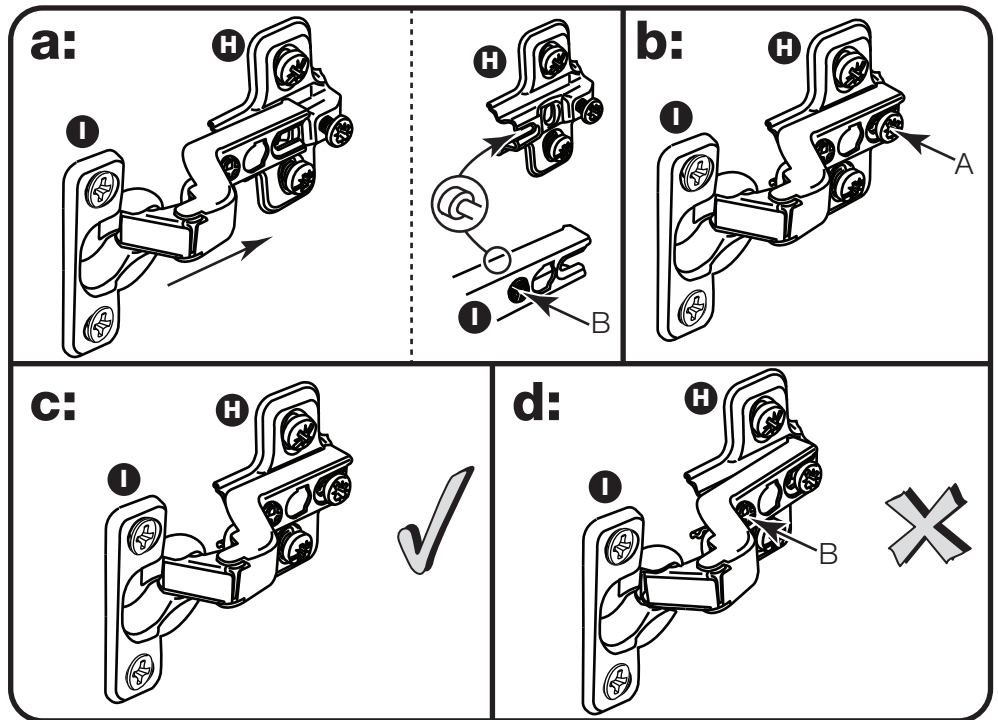

Assembly Instructions

Step 20

Adjust the door if needed

a: Before adjusting the door, use a spirit level to check the top (or base) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.

Loosen screws A on hinge plates and move door up or down as required. Retighten screw A.

c: Forward and Back adjustment.

Loosen screw B on hinge plate and move door in or out as required. Retighten screw B.


d: Sideways adjustment.

To move door 'out' loosen screw C.
To move door 'in' tighten



Hinge Fixing and Door Adjustment

www.youtube.com/watch?v=wIMhUHeLBtg

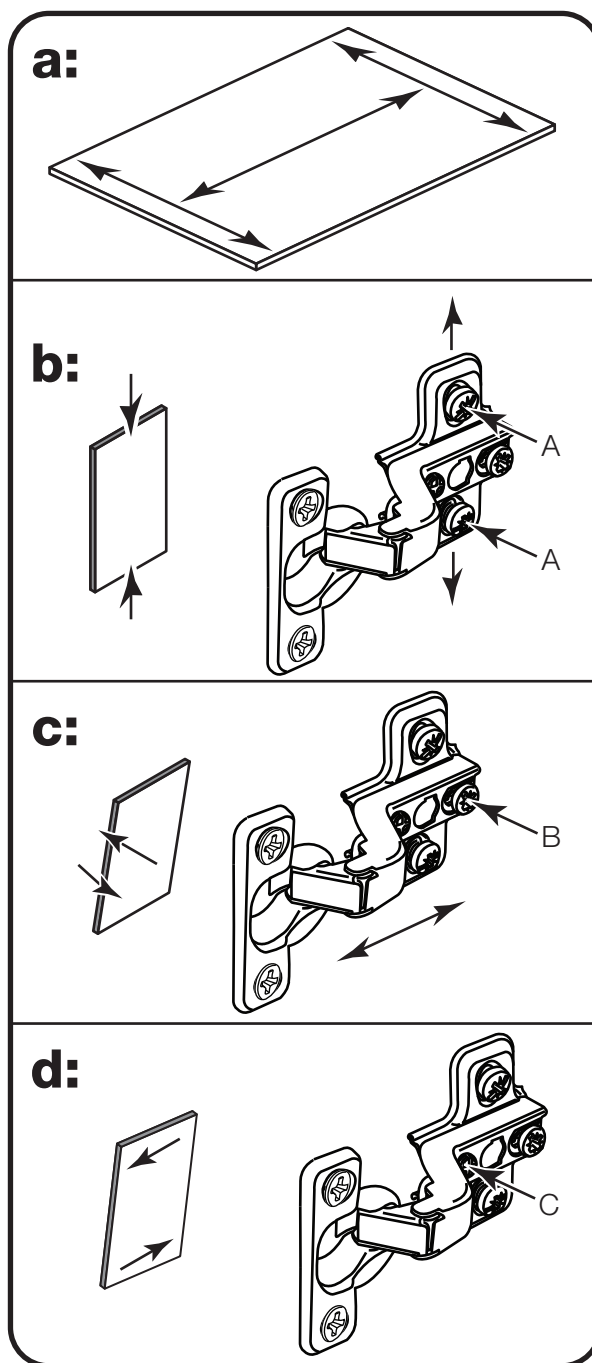

Assembly Instructions

Step 21

Fit the 2 overbalance protector kits

To prevent possible overbalancing this unit **must be secured** to a suitable wall by fitting of the 2 overbalance protector kits **K**, one either end of the modesty panel.



Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Assembly is complete

WARNING!

In order to prevent overturning this product must be used with the 2 wall attachment devices provided

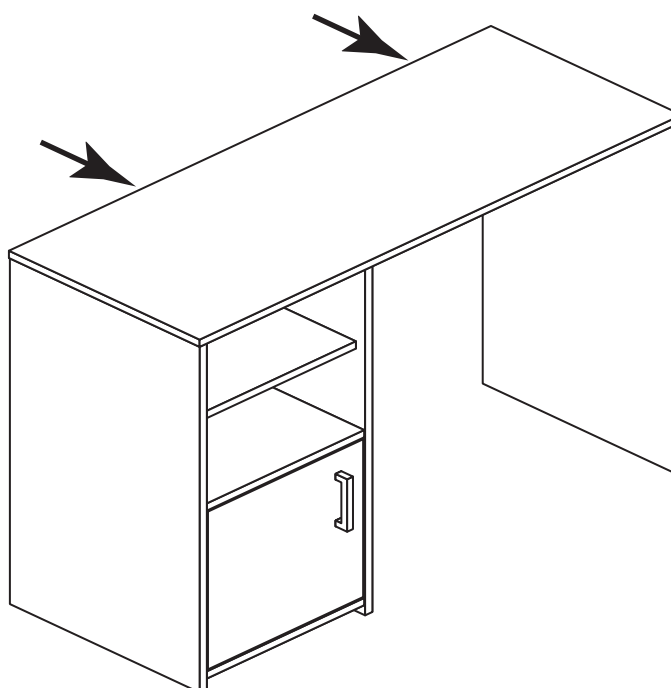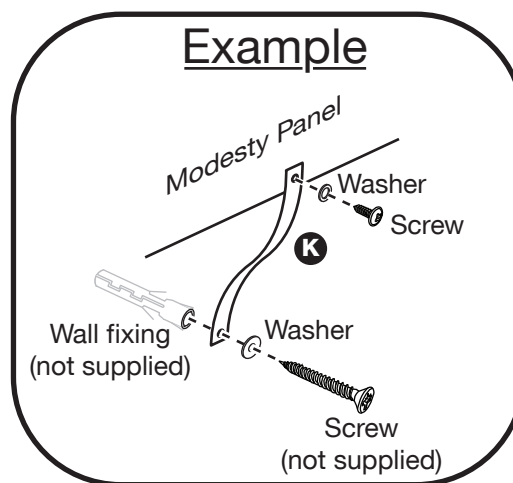


See the next page for a guide to wall mounting and fixings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0370 112 1928.
For any other queries please contact the Customer Helpline on: 0345 640 2020

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:  Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

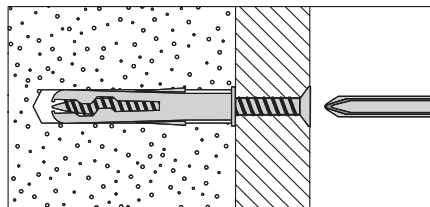


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

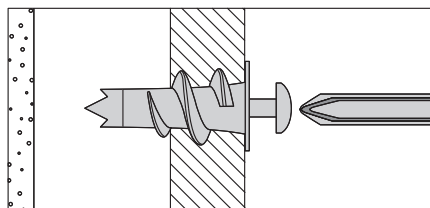


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

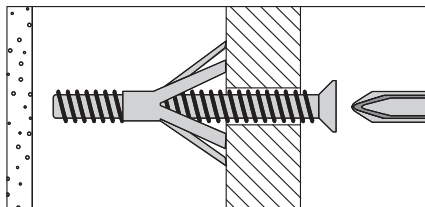


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

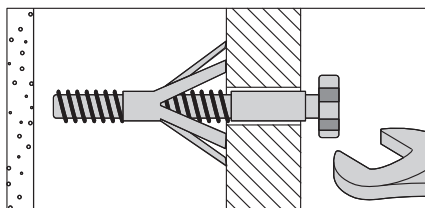


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

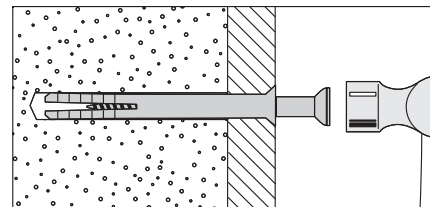

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

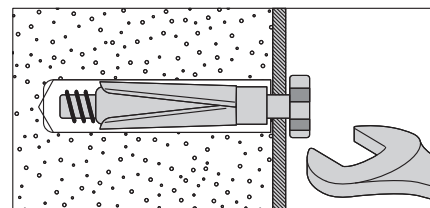

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

